 


AB-1 Bookcase Assembly Instructions

 
Note: If you have two of the same cabinet each cabinet will have a different cabinet number.

Panel Stickers/Labels – Do not remove any cabinet stickers from the panels until the units have been built, as these will assist with assembly. Most of the stickers are placed on the “back” or underside of the cabinet and will not be seen once assembled.

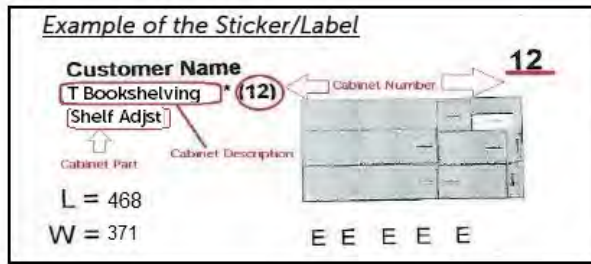

Please Note:
 Cabinet number shown is an example only.

AB-1 Bookcase Cabinetry Panels

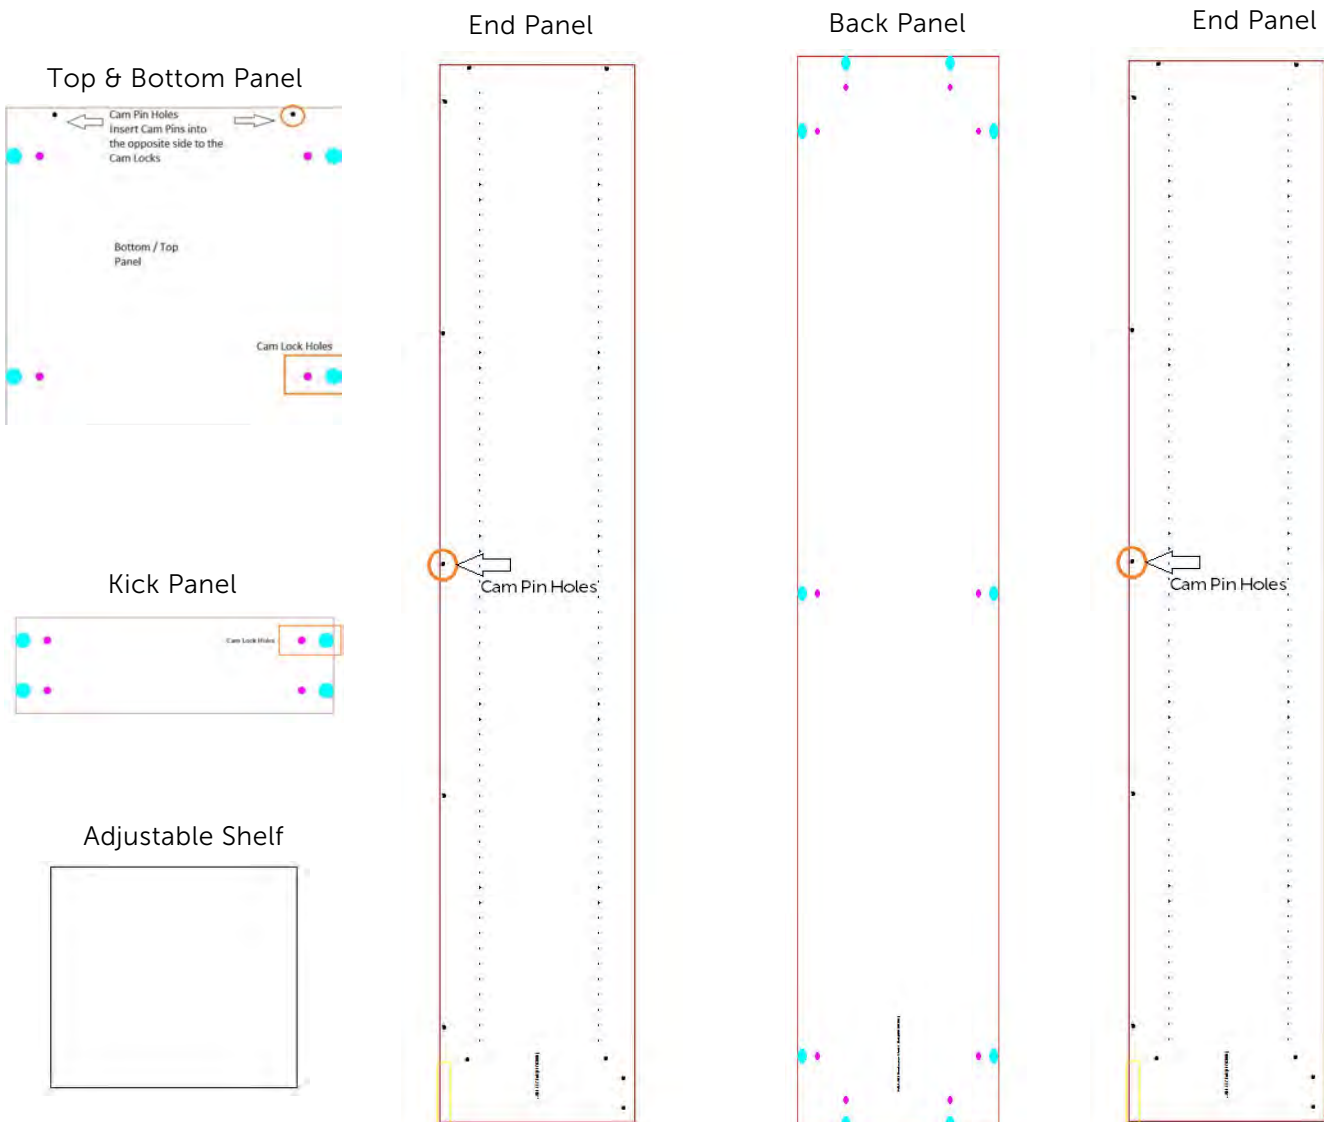

AB-1 Hardware Parts

Cam Lock



Cam Pin



28mm Wood Screw

 
 
 
 


Shelf Pin






Step 1 – Inserting Hardware

Cam Locks – Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

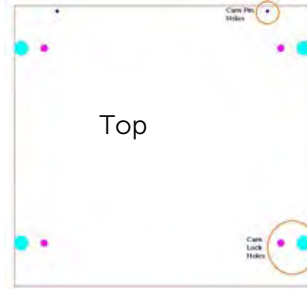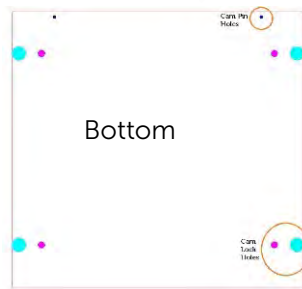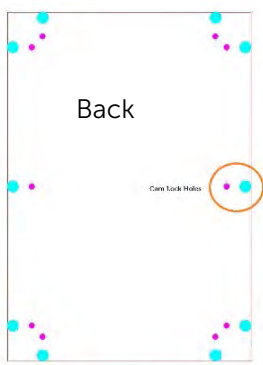

   Cam Pins - Insert all Cam Pins into the following panels as described by the cabinet part located on the cabinet sticker.

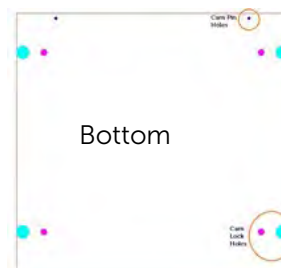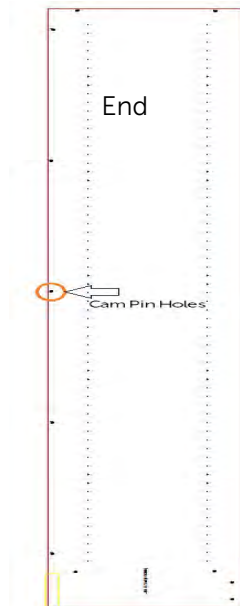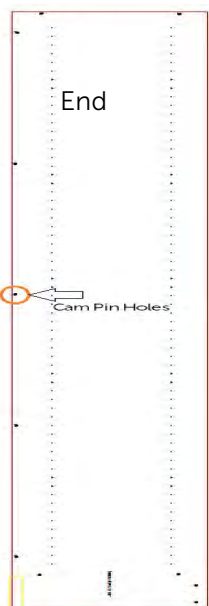

NOTE: In the Top and Bottom Panels insert the cam pins on the opposite side to the Cam Lock.

Step 2 - Bookcase Assembly

Start the Bookcase assembly by using either one of the Bookcase End Panels and fixing it to the Back Panel. Ensure the cam locks on the Back Panel are not facing what will be the inside of the Bookcase when built.

Back Panel - Place the Bookcase Back Panel onto the End Panel. Match up the cam locks with the cam pins. Tighten the cam locks and cam pins together by using a Phillips head hand screwdriver.

Top & Bottom Panels - With the cam locks facing away from the inside of the Bookcase attach the Bottom Panel to the End Panel and Back Panel. Repeat this process with the Top Panel. **Refer to images 1 & 2 on page 4**

Place the remaining End Panel on top of the previously assembled panels. Ensuring the cam pins are lined up with the cam locks. Tighten the cam pins to the cam locks.

Tip: You may need to lightly tap the cam pins into the cam locks with a rubber mallet. Ensure you do this where the cam pins are. Failure to do so may result in damage to the End Panel.

Step 3 - Fixing Bookcase to the Wall Bed

You will need to pre-drill the 5mm screw holes. When attaching the cabinet to the wall bed. These holes will be covered using the FastCaps supplied.

- Temporarily fasten the cabinets together with clamps. Pre-drill a total of four 5mm pilot holes in the end panel of the cabinet — two towards the top of the unit and two at the bottom.

IMPORTANT – When pre-drilling wood screw pilot holes use caution not to go all the way through to the end panel of the wall bed.

- Attach the cabinet to the wall bed using the 28mm screws supplied. Then remove the clamps.

Caution: Do Not over tighten the wood screws into the side of the cabinet End Panel as it may end up protruding through the opposite side of the panel.

Adjustable Shelf - Insert the shelf pins into the shelf pin holes at the desired height for your shelf. If you find it too high or too low for the books you want to store, relocate the shelf pins to the holes at the required height.

IMPORTANT SAFETY INFORMATION

All WallBeds Australia Bookcases and Cabinets must be securely attached to the WallBed before use. Ensure that children DO NOT climb or hang on any part of the Bookcase Or Cabinet. Failure to do so may result in personal injury.

Image 1


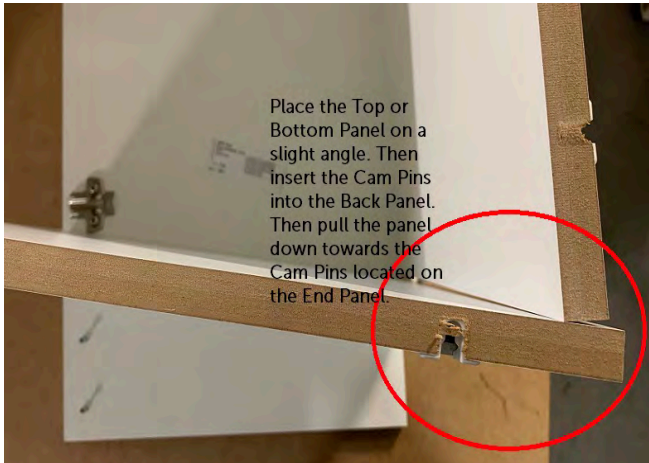 


Image 2

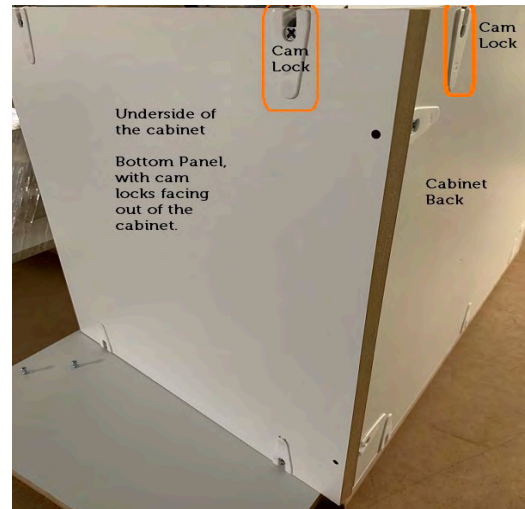 

Removing Panel Stickers/Labels

Remove once installed, heat up with hair dryer & then to remove any sticky residue use wax and grease remover or similar.

Avoid using a razor blade as you may damage the cabinetry.