


AB1a- Cabinet Assembly Instructions


Note: If you have two of the same cabinet each cabinet will have a different cabinet number.

<u>Panel Stickers/Labels</u> –Do not remove any cabinet stickers from the panels until the units have been built, as these will assist with assembly. Most of the stickers are placed on the "back" or underside of the cabinet and will not be seen once assembled.

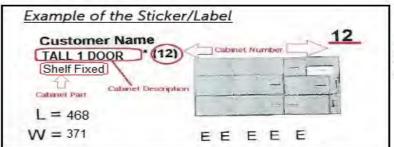

<u>Please Note:</u> Cabinet number shown is an example only.

AB1a Cabinetry Panels

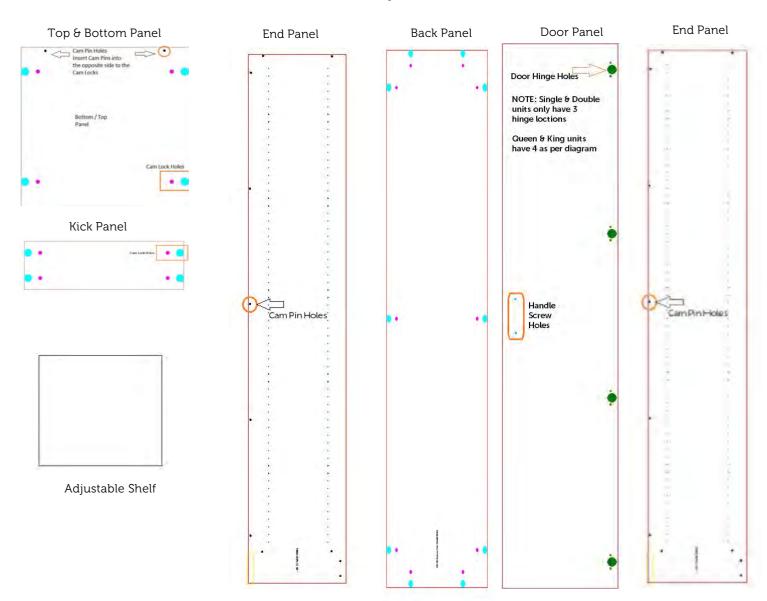


AB1a Hardware Parts




Step 1 – Inserting Cabinetry Hardware

<u>Cam Locks</u> – Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

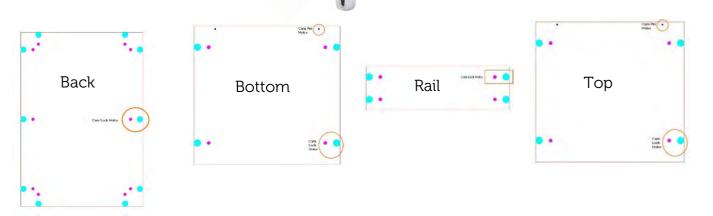

<u>Cam Pins</u> Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

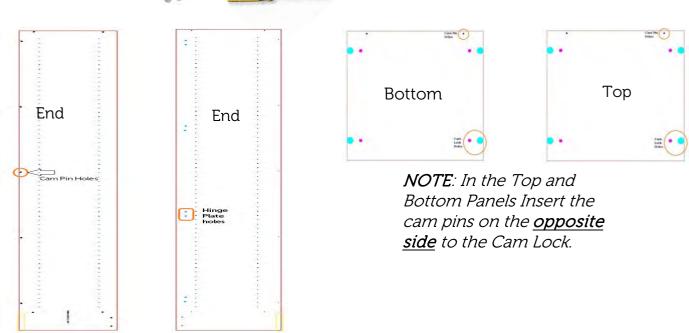

Door Hinge Clips –

Attach the Hinge Plates before assembling the cabinetry.

With the arrow indicator on the hinge block facing to the front edge of the panel. Line up the Hinge Plate with the pre-drilled holes in the End Panel. Fix these by tapping them in gently with a hammer, then tightening the screws.

Step 2 – Cabinet Assembly

Start the cabinetry assembly by using either one of the End Panels

<u>Back Panel</u> - Ensuring the cam locks are facing away from the inside. Place the cabinet back panel onto the side panel. Match up the cam locks with the cam pins. Tighten the cam locks and cam pins together by using a Phillips head hand screwdriver.

End Panel - With the cam locks facing away from the inside of the cabinet attach the bottom panel to the end panel and back panel.

<u>Top Panel</u> - With the cam locks facing the outside of the cabinet attach the bottom panel to the end panel and back panel. - It is essential that the cam locks are facing the outside of the cabinet.

Place the remaining end panel on top of the previously assembled panels. Ensuring the cam pins are lined up with the cam locks. Tighten the cam pins to the cam locks.

<u>Note:</u> You may need to lightly tap the cam pins into the cam locks with a rubber mallet. Ensure you do this where the cam pins are located. Failure to do so may result in damage to the End Panel.

Step 3 – Fixing Pull Out Cabinet to the Alpha Wall Bed

Place the cabinet next to the side of the Alpha Wallbed that it will be attached to <u>PRIOR</u> to attaching the door panel. Once the cabinet is in place next to the wall bed then fit door hinges to the cabinet door and attach the door to the cabinet.

Step 4 – Fitting the Door Hinges and Door Panel



Cupboard Door Hinges -

Place the cup part of the hinge into the cupboard door panel ensuring that the arm of the hinge is facing out of the door panel. Once in the position turn the two screws in the flat plate to the right, this will secure the hinge.

<u>Attaching the Door to the Cabinet</u> - Clip the hinge arm into the hinge block previously attached to the bookcase.

Attaching the Cabinet to your wall bed - Check that the cabinet door panel is flush with the front edge of the wall bed End Panel. Using existing shelf pin holes (2 up towards the top and 2 at the bottom) attach the bookshelf to the side of the bed cabinet by using the 28mm wood screws supplied.

Caution: Do Not over tighten the wood screws into the side of the wall bed End Panel as it may end up protruding through the opposite side of the panel.

<u>Adjustable Shelf</u> - Insert the shelf pins into the shelf pin holes at the desired height for your shelf. Place your shelf on them. If you find it's too high or too low for the books you want to store, it's an easy matter to adjust the shelf by moving the supports to the holes at the required height.

Attaching Door Handle -



Removing Panel Stickers/Labels

To remove once installed, heat up with hair dryer & then to remove any sticky residue use wax and grease remover or similar.

Avoid using a razor blade as you may damage the cabinetry.