

WALLBEDS



Australia

Reclaim Your Space



Important Safety Advice Sheet

PLEASE READ BEFORE YOU BEGIN:


- Please read and understand the instructions prior to assembly. Incorrect installation of this product could possibly result in personal injury or physical damage.
- WallBeds Australia recommends two people to safely assemble and install the wall bed - It is not recommended you try to install this bed on your own.
- The wall bed **MUST** be securely fastened to the wall prior to use. Failure to do so will cause the bed to tip over & may cause damage to the cabinet or serious personal injury.
- All additional cabinetry must be securely fasten to the Wall Bed cabinet.
- Whilst these products are DIY it is recommended the wall bed be installed by a qualified trades person if you are not comfortable with the installation of this product.

WallBeds Australia is not responsible for any damages or injuries incurred by incorrect installation of this product.


AB-4 Assembly Instructions

Note: If you have two of the same cabinet each cabinet will have a different cabinet number. Prior to assembly, separate and group all matching panels numbers.

Panel Stickers/Labels – Do not remove any cabinet stickers from the panels until the units have been built, as these will assist with assembly. Most of the stickers are placed on the “back” or underside of the cabinet and will not be seen once assembled.

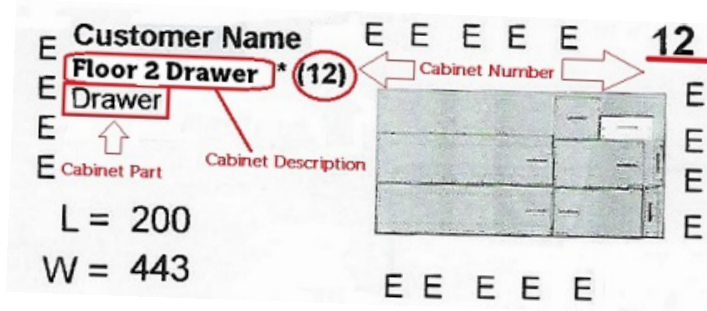

AB-4 Drawer Unit Panels

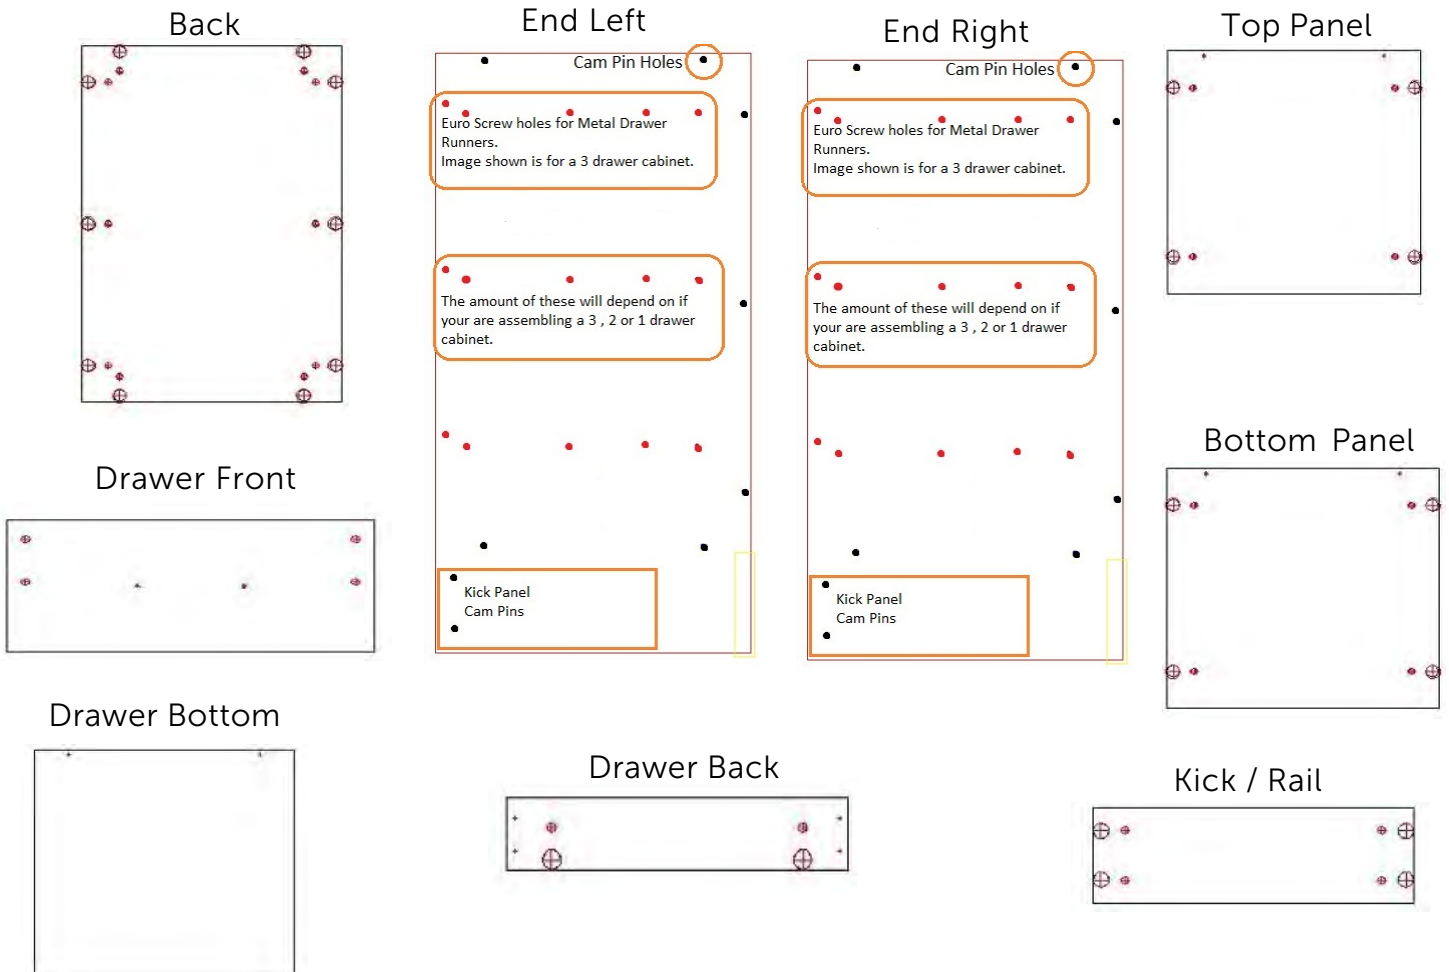

AB-4 Drawer Unit Hardware

Small Handle



Drawer Runners & Metal Drawer Sides



Drawer Clip



Handle Fixing Screw



28mm Wood Screw



Cam Pin




Euro Screw



Cam Lock



Done Head Screw



Step 1 – Inserting Drawer Unit Hardware


Cam Locks – Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.




Back Panel



Bottom Panel

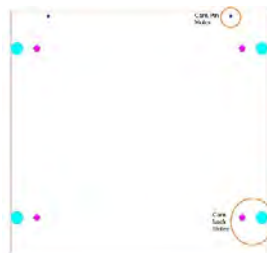


Top Panel

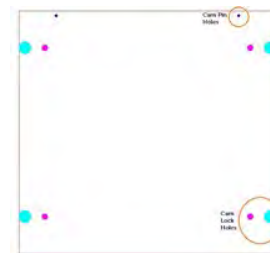



Rail / Kick




Drw Back



Cam Pins Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

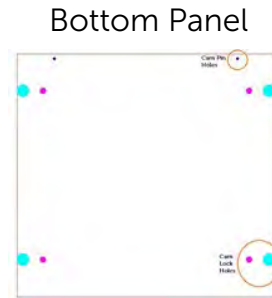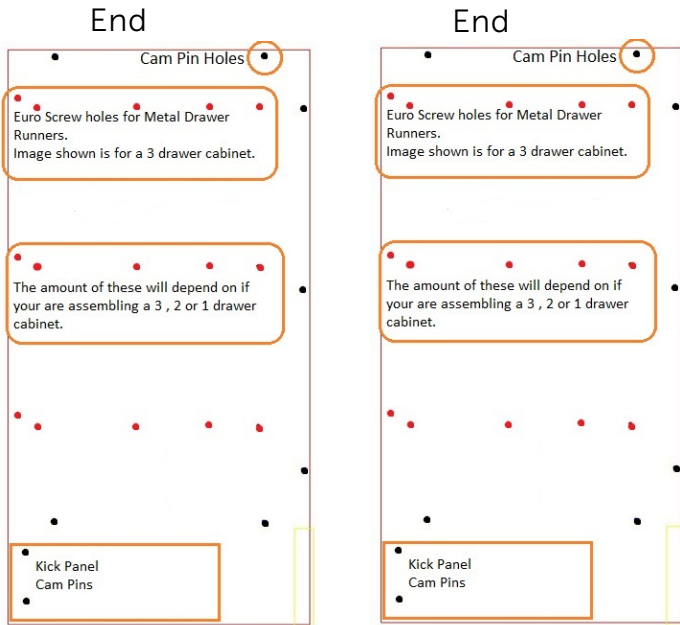

NOTE: In the Bottom Panel Insert the cam pins on the opposite side to the Cam Lock.

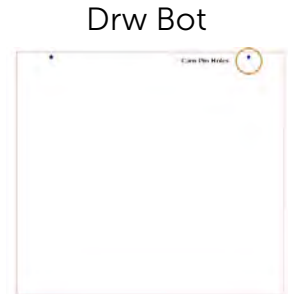

NOTE: In the Top Panel Insert the cam pins on the same side as the Cam Lock

Attach the runners prior to assembling the cabinetry.

Drawer Runners –



Line up the holes in the metal runner with the pre-drilled holes in the End Panel. Attach these runners using the Euro screws. Do this for both End Panels- **Refer to images 1 & 2 page 9**

Drawer Clips –



Insert these into the drawer front, ensuring the up & down arrows on the drawer clips are facing the outside edge of the drawer panel. Fix these into the drawer front by tapping them in gently with a hammer - **Refer to image 5 page 9**

Step 2 Ab-4 Drawer Unit Assembly

Start the cabinet assembly by using either one of the End Panels.

BackPanel- With the cam locks are facing away from the inside. Place the cabinet back panel onto the side panel. Match up the cam locks with the cam pins. Tighten the cam locks and cam pins together by using a Phillips head hand screwdriver.

Bottom panel - With the cam locks facing away from the inside of the cabinet attach the bottom panel to the end panel and back panel. *Refer to images 6 & 7 page 10*

TopPanel- With the cam locks facing the inside of the cabinet attach the bottom panel to the end panel and back panel. - Ensure the cam locks are facing the inside of the cabinet.

Kick/Rail - With the cam locks facing to the back of the cabinet attach the kick panel to the end panel.

Place the remaining end panel on top of the previously assembled panels. Ensuring the cam pins are lined up with the cam locks. Tighten the cam pins to the cam locks.

Drawer Assembly

Note – There are no guide holes on the underside of the drawer bottom panel for the metal drawer sides. The dome head screws supplied do not require these holes to be pre-drilled.

With the cam locks facing the back attach the drawer back to the drawer bottom panel. Tighten cam locks to cam pins. *Refer to image 4 page 9*

Metal Drawer Sides - Using the dome head screws fix the metal drawer sides to the drawer bottom and drawer back panels. *Refer to images 3 & 4 page 9*. Place assembled drawer into the drawer unit. -

DO NOT ATTACH DRAWER FRONTS UNLESS THE DRAWERS ARE IN THE CABINET.

To ensure you place the drawer front up the correct way *Refer to images 8 and 9 on page 10*

Do not fully connect the drawer front onto the metal drawer sides until you are sure the drawer front is up the correct way.

Attaching the Drawer Front - Starting with the top drawer, gently close the drawer ensuring the top edge of the drawer front is level with the top panel of the drawer unit.

If the drawer front is higher than the top panel, remove it from the drawer clips and turn the drawer front up the opposite way.


Double-check the drawer front is now level with the cabinet top panel.

Once the drawer front is the correct way up, push the drawer front into the metal sides of the drawer until you hear the drawer click into place on both sides. Tighten the screws on the outside of the drawer clips using a Phillips head hand screwdriver. *Refer to images 10 & 11 on page 11*

AB-4 Bookcase Instructions

Note: If you have two of the same cabinet each cabinet will have a different cabinet number. Prior to assembly, separate and group all matching panels panel numbers.


Panel Stickers/Labels –Do not remove any cabinet stickers from the panels until the units have been built, as these will assist with assembly. Most of the stickers are placed on the “back” or underside of the cabinet and will not be seen once assembled.

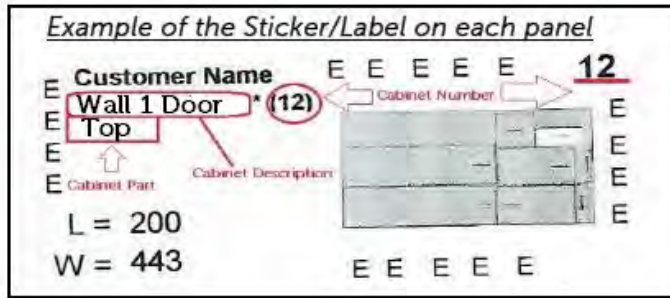


Please Note:
 Cabinet number shown is an example only.

AB-4 Bookcase Panels


End Left

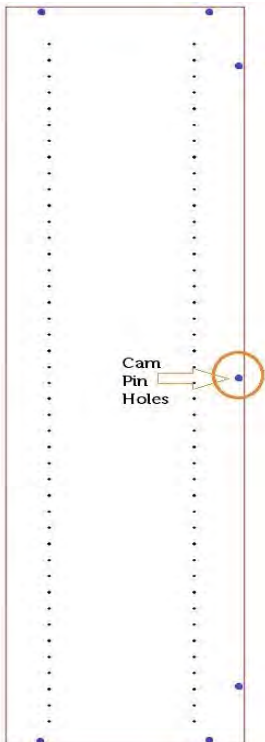


End Right

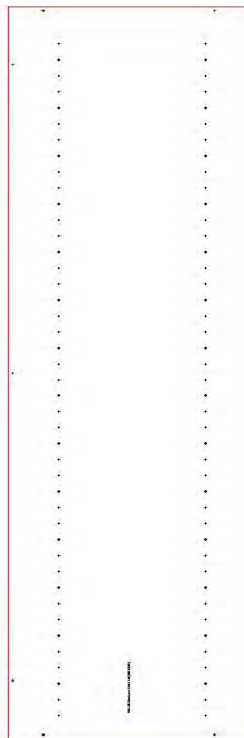


Back Panel

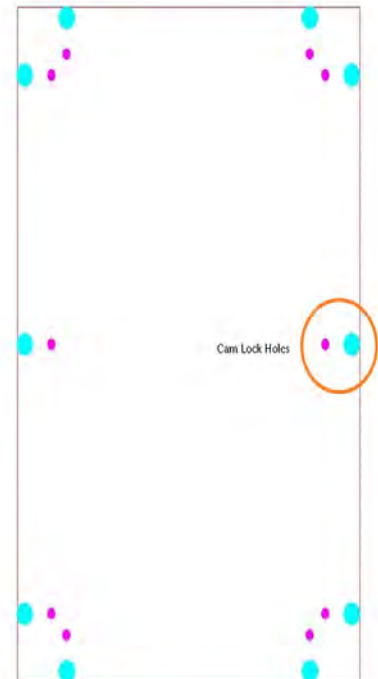

Top Panel

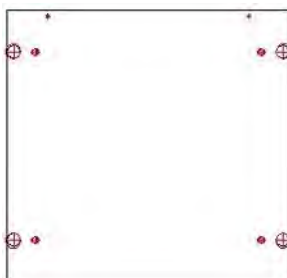

Bottom Panel

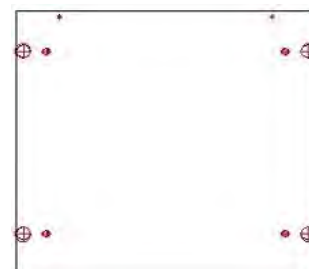

AB-4 Bookcase Hardware Parts

Cam Lock



Cam Pin



28mm Wood Screw






Shelf Pin







Step 1 – Inserting Hardware

Cam Locks – Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

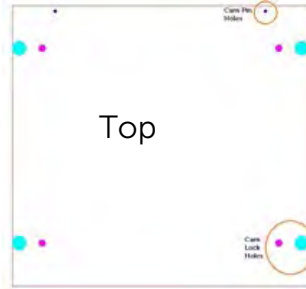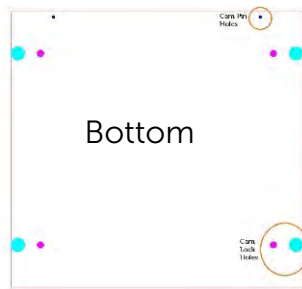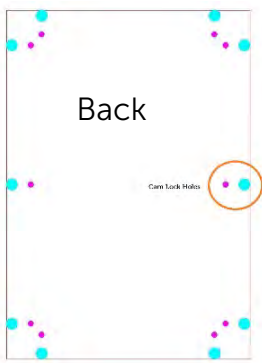

Cam Pins Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

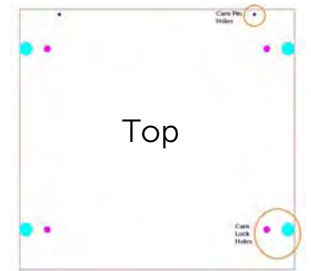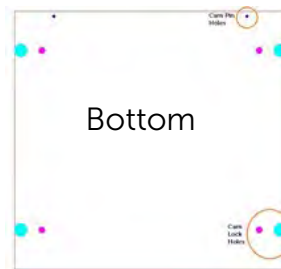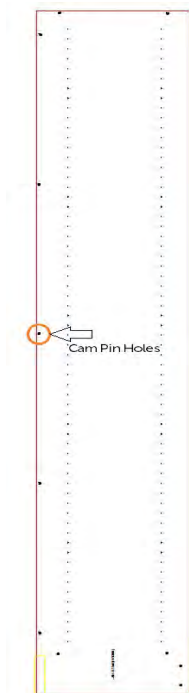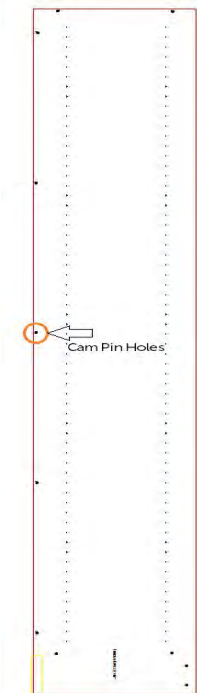

NOTE: In the Top and Bottom Panels Insert the cam pins on the **opposite side** to the Cam Lock.

Side / End

Side / End

Step 2 - Bookcase Assembly

Start the Bookcase assembly by using either one of the Bookcase End Panels and fixing it to the Back Panel. Ensure the cam locks on the Back Panel are not facing what will be the inside of the Bookcase when built.

Back Panel- Place the Bookcase Back Panel onto the End Panel. Match up the cam locks with the cam pins. Tighten the cam locks and cam pins together by using a Phillips head hand screwdriver.

Top & Bottom Panels- With the cam locks facing away from the inside of the Bookcase attach the Bottom Panel to the End Panel and Back Panel. Repeat this process with the Top Panel.

Place the remaining End Panel on top of the previously assembled panels. Ensuring the cam pins are lined up with the cam locks. Tighten the cam pins to the cam locks.

Tip: You may need to lightly tap the cam pins into the cam locks with a rubber mallet. Ensure you do this where the cam pins are. Failure to do so may result in damage to the End Panel.

Step 3 – Fixing both Units together and to the Alpha Wall Bed

- Place the Drawer Cabinet unit next to the side of the Alpha Wallbed that it will be attached to. Ensure the front edge of the drawers are flush with the front edge of the wall bed cabinet.
- Place the bookshelf unit on top of the drawer cabinet unit and line up the front of the bookcase bottom panel with the front edge of the drawer.
- Check that the bookshelf end panel is also flush with the front edge of the wall bed cabinet end panel.

You will need to pre-drill the 5mm screw holes.

When attaching the Pull Out Drawer / Table unit to the bookshelf.

- Remove the pull out drawer / & pre-drill a 5mm hole up through the top panel of the pullout drawer unit into the bottom panel of the bookshelf. Do one towards the front and then one towards the back of the unit. **IMPORTANT** - Use caution not to go all the way through to the bottom panel of the bookcase. Attach together using the 28mm screws supplied.
- Using an existing shelf pin hole, fix the bookshelf to the side of the bed cabinet by using the 28mm wood screws supplied.

Removing Panel Stickers/Labels

To remove once installed, heat up with hair dryer & then to remove any sticky residue use wax and grease remover or similar.

Avoid using a razor blade as you may damage the cabinetry.

IMPORTANT SAFETY INFORMATION

All WallBeds Australia Bookcases and Cabinets must be securely attached to the WallBed before use. Ensure that children DO NOT climb or hang on any part of the Bookcase or Cabinet.

Failure to do so may result in personal injury.

Image 1

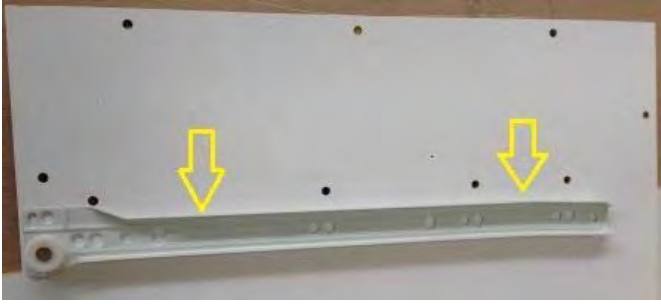


Image 2

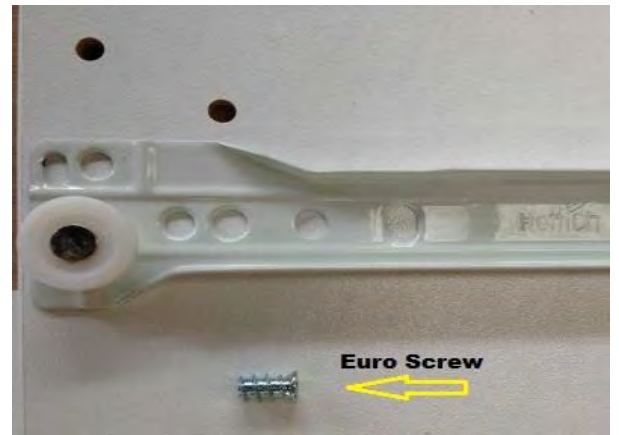


Image 3



Image 4

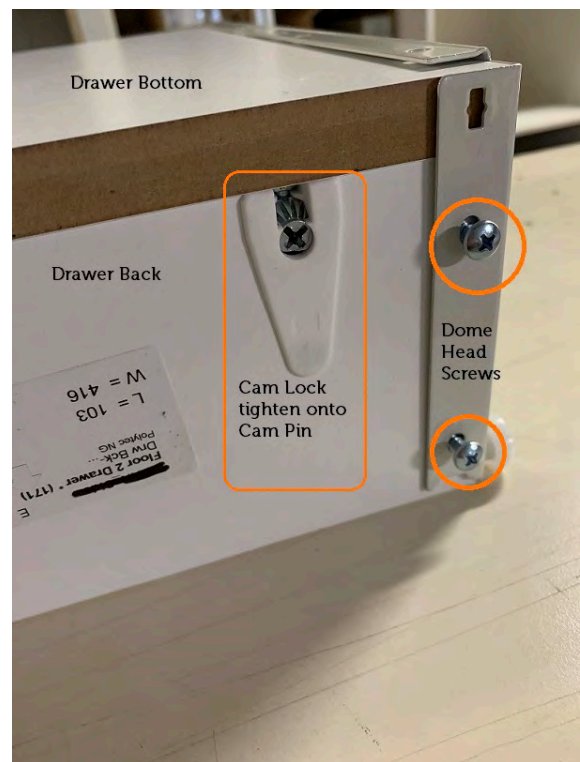


Image 5



Image 6

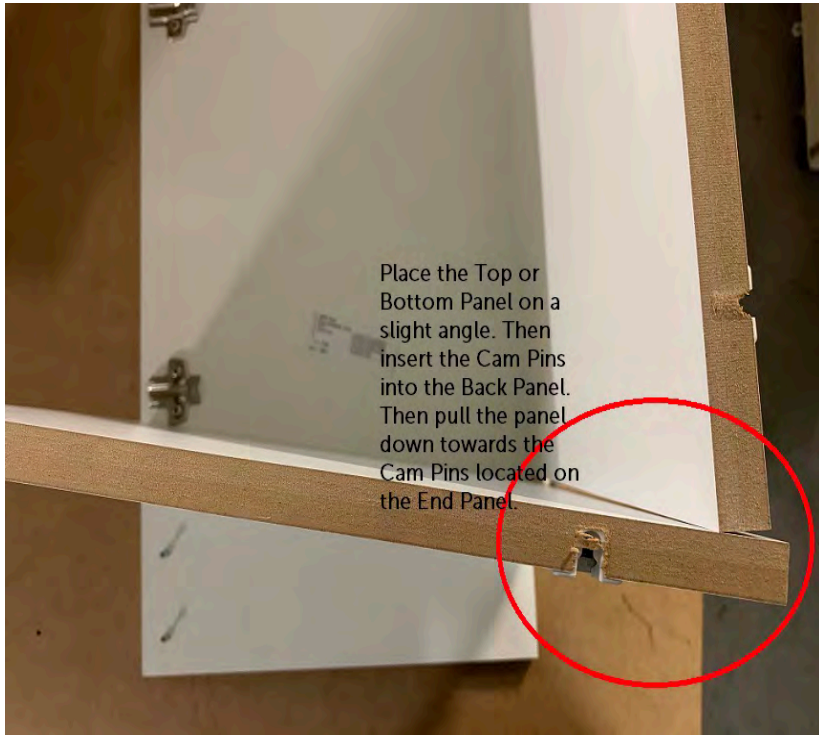


Image 7

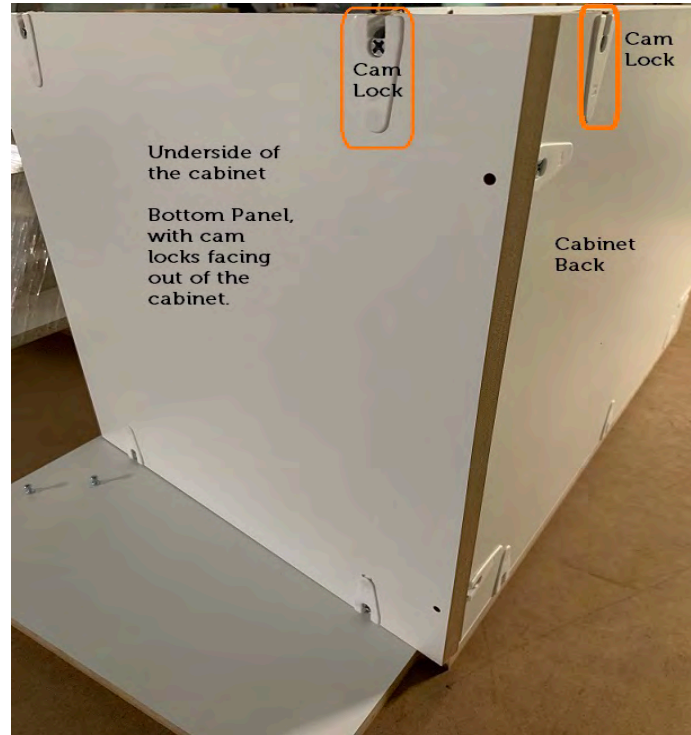


Image 8

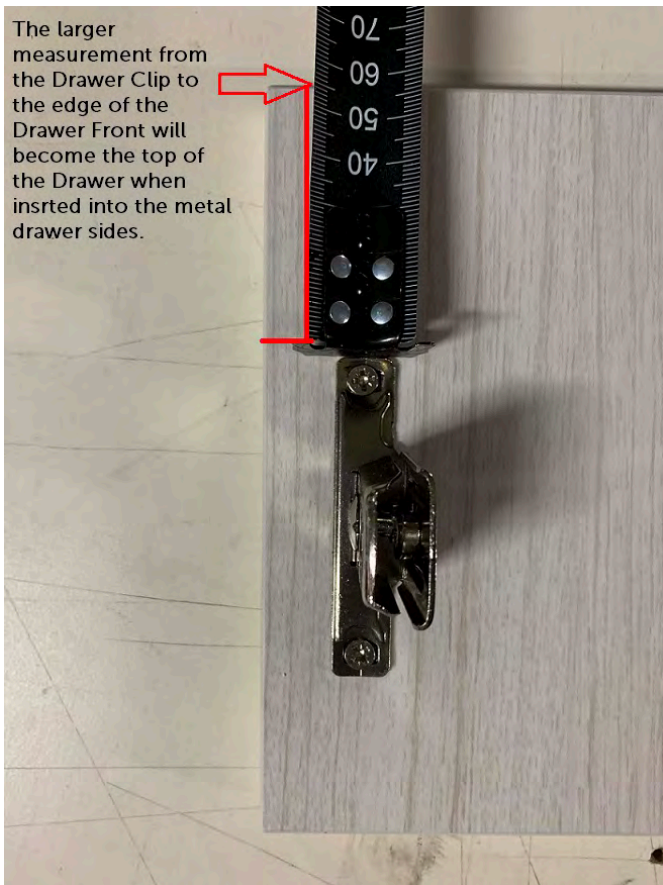


Image 9

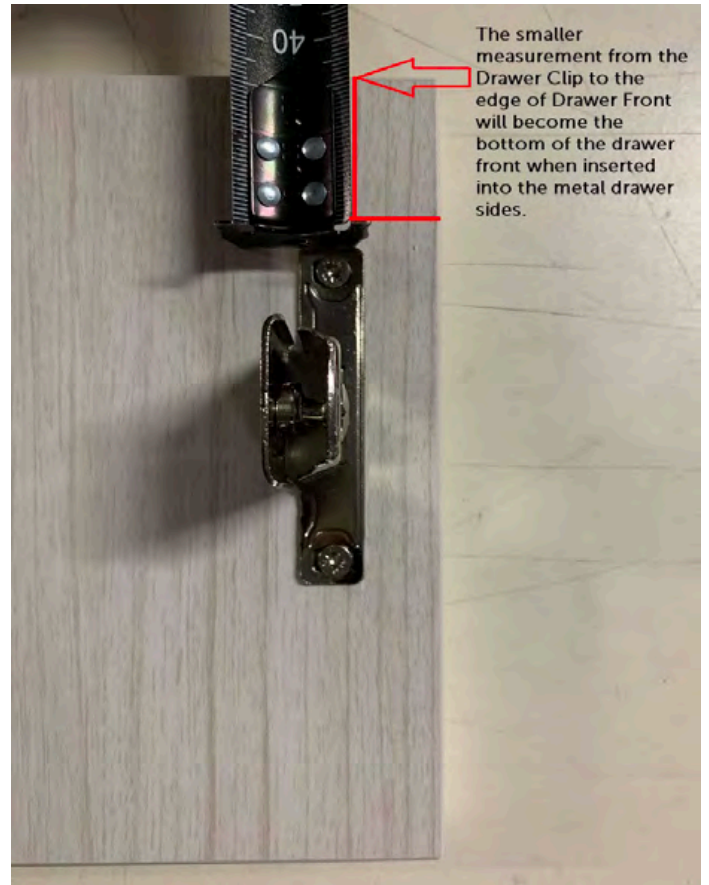


Image10



Image11

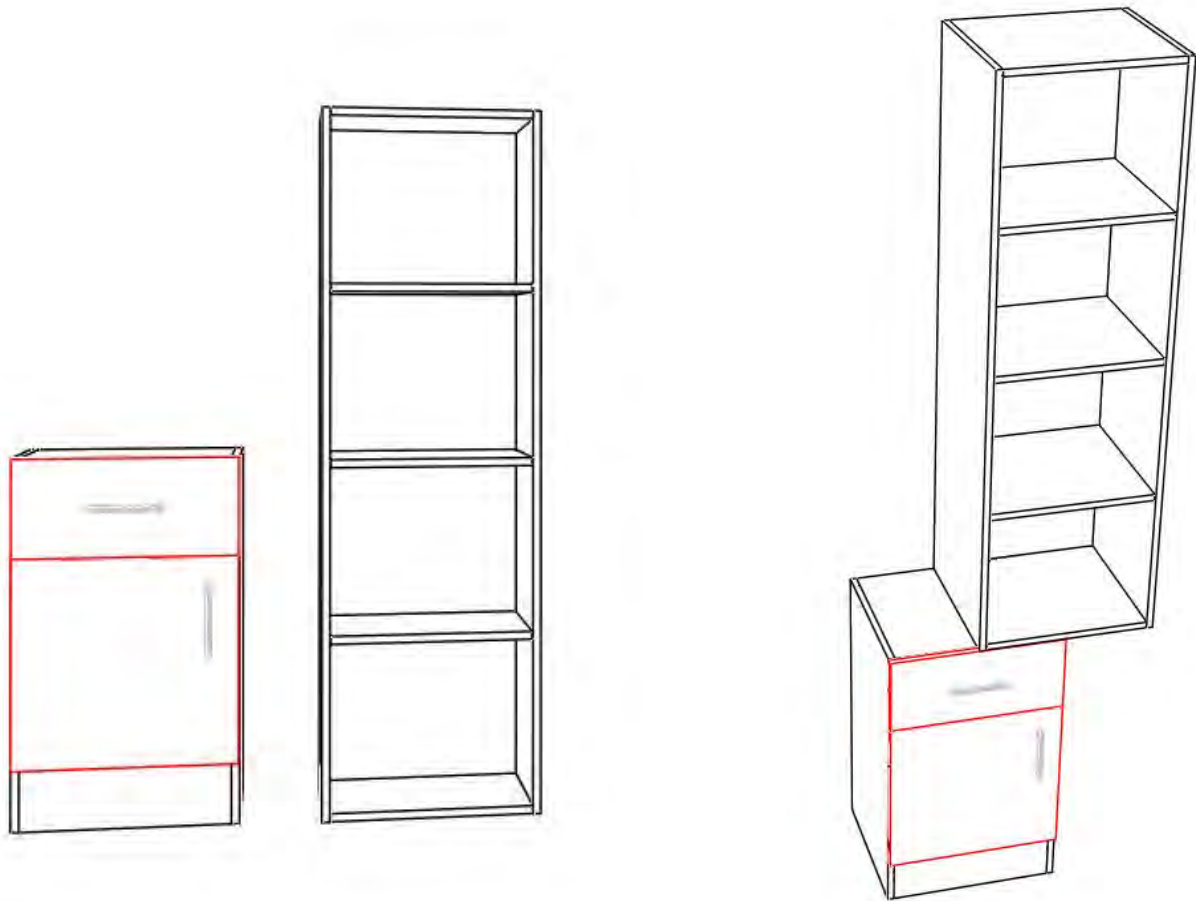


Image 12



How to remove a drawer front if it has been attached incorrectly

- Insert a small tip screw driver into the hole in the drawer clip as circled above.
- Apply a small amount of pressure to release the plastic clip inside.
- Lightly pull on the drawer front whilst pressing on the plastic clip.



NOTE: The images displayed above are a representation of how to place Top unit onto Lower unit.
These images may not represent each individual product.

IMPORTANT SAFETY INFORMATION

All WallBeds Australia Bookcases and Cabinets must be securely attached to the WallBed before use. Ensure that children DO NOT climb or hang on any part of the Bookcase or Cabinet.

Failure to do so may result in personal injury.

WALLBEDS
Australia
Reclaim Your Space