


AB-6a Cupboard & Pull Out Drawer/Table Assembly Instructions

Note: If you have two of the same cabinet each cabinet will have a different cabinet number. Prior to assembly, separate and group all matching panels panel numbers.


Panel Stickers/Labels –Do not remove any cabinet stickers from the panels until the units have been built, as these will assist with assembly. Most of the stickers are placed on the “back” or underside of the cabinet and will not be seen once assembled.

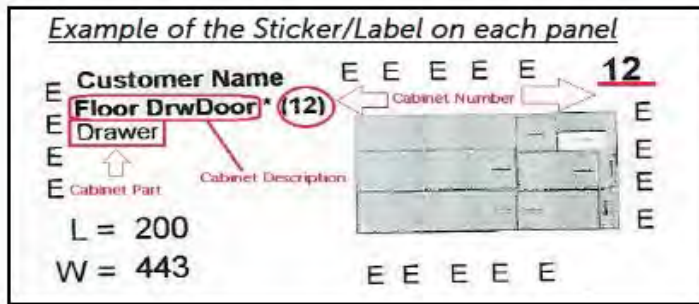


Please Note:
Cabinet number shown is an example only.

AB-6a Cupboard & Drawer Panels

Cupboard Door

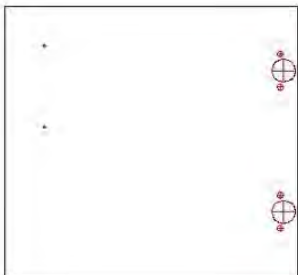


End Left

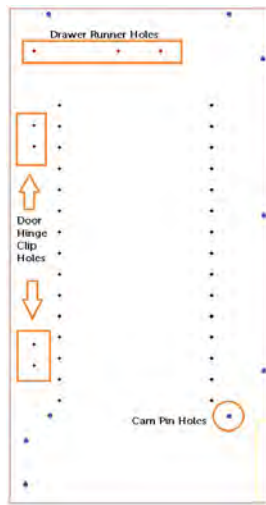


End Right



Top Panel

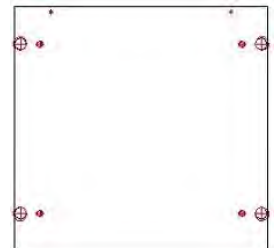


Back

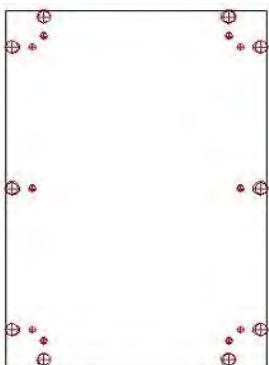

Pull Out Drawer/Table Front




Bottom Panel

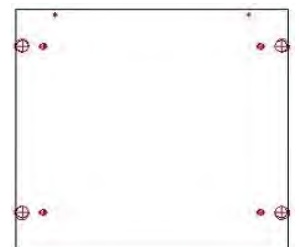


Kick



Pull Out Drawer/Table Bottom

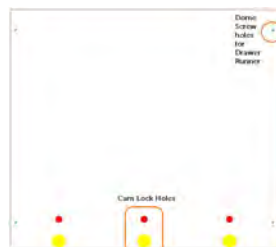

Adjustable Shelf

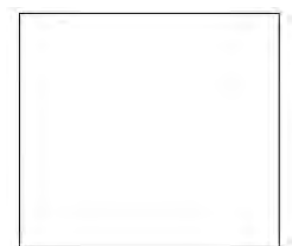

AB-6a Cupboard Drawer Hardware Parts

Small Handle



Pullout Drawer/Table Runners



Drawer Clip



Handle Screw



Door Hinge



Door Hinge Clip



Euro Screw



Cam Lock



Cam Pin



Dome Head Screw



28mm Wood Screw




Adjustable Shelf Pin







Step 1 – Inserting Hardware

Cam Locks – Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

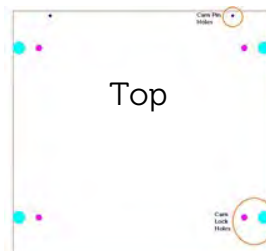

Cam Pins Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

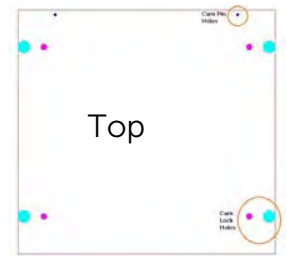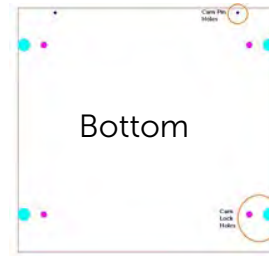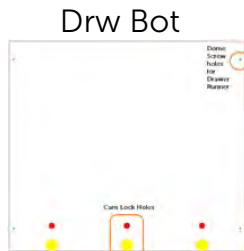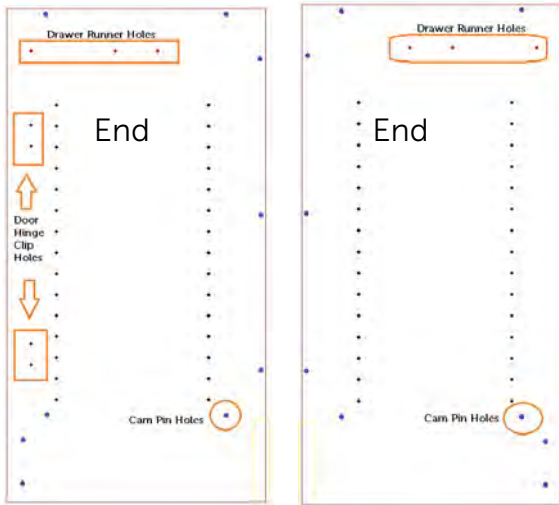

NOTE: In the Bottom Panel Insert the cam pins on the opposite side to the Cam Lock.

NOTE: In the Top Panel Insert the cam pins on the same side as the Cam Lock

Pull Out Drawer/Table Runners –

Attach the runners before assembling the cabinetry.



To disassemble the runner, turn the drawer runner over to view from the back.

Detach the drawer / table slide from the main sliding runner by pulling the clip as indicated by the arrow on the clip. **Refer image 1 page 9**

Line up the three holes in the runner with the pre-drilled holes in the cabinet End Panel. Attach these runners using the Euro screws.

DO NOT re-attach the slide runner at this point.

Door Hinge Clips –

Attach the Hinge Clips before assembling the cabinetry.



With the arrow indicator on the hinge block facing to the front edge of the panel. Line up the Hinge Plate with the pre-drilled holes in the End Panel. Fix these by tapping them in gently with a hammer, then tightening the screws. **Refer image 6 page 10**

Drawer Clips –



Insert these into the drawer front ensuring the up & down arrows on the drawer clips are facing the outside edge of the drawer panel. **Refer image 10 page 11**

Fix these into the drawer front by tapping them in gently with a hammer.

Cupboard Door Hinges –



Place the cup part of the hinge into the cupboard door panel ensuring that the arm of the hinge is facing out of the door panel. Once in the position close the hinge flap, this will secure them into place. **Refer images 4 and 5 page 9**

There are no screws required to attach these hinges.

Step 2 – Cupboard & Pullout Drawer/Table Cabinet Assembly

Start the cabinet assembly by using either one of the cabinet End Panels.

CabinetBackPanel - Place the cabinet back panel onto the side panel. With the cam locks facing away from the inside match up the cam locks with the cam pins. Tighten the cam locks and cam pins together by using a Philips head hand screwdriver.

CabinetBottomPanel - With the cam locks facing away from the inside of the cabinet attach the panel to the end panel and back panel. **Refer image 7 page 10**

CabinetTopPanel - With the cam locks facing to the inside of the cabinet attach the panel to the end panel and back panel.

CabinetKick/RailPanel - With the cam locks facing to the back of the cabinet attach the panel to the end panel.

Place the remaining end panel on top of the previously assembled panels. Ensuring the cam pins are lined up with the cam locks. Tighten the cam pins to the cam locks.

Note: You may need to lightly tap the cam pins into the cam locks with a rubber mallet. Ensure you do this where the cam pins are located. Failure to do so may result in damage to the End Panel.


PullOutDrawer/TableSlide - Attach the pull out slides to the drawer bottom using the dome head screws. The holes for these are pre-drilled. **Refer image 3 page 9**

CupboardDoor - Line up the prongs on the door hinge with the hinge clips. Push the door, so these clips are all the way in and then push the back of the hinge arm until you hear it click into position. **Refer image 8 page 10**

AB-6a Top Cabinet Assembly Instructions

Note: If you have two of the same cabinet each cabinet will have a different cabinet number. Prior to assembly, separate and group all matching panels panel numbers.


Panel Stickers/Labels –Do not remove any cabinet stickers from the panels until the units have been built, as these will assist with assembly. Most of the stickers are placed on the “back” or underside of the cabinet and will not be seen once assembled.

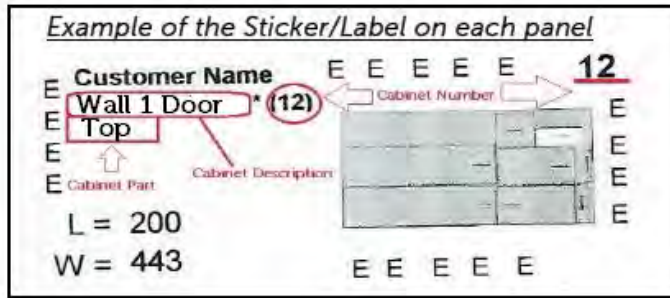


Please Note:
 Cabinet number shown is an example only.

AB-6a Top Cabinet Panels

End Left

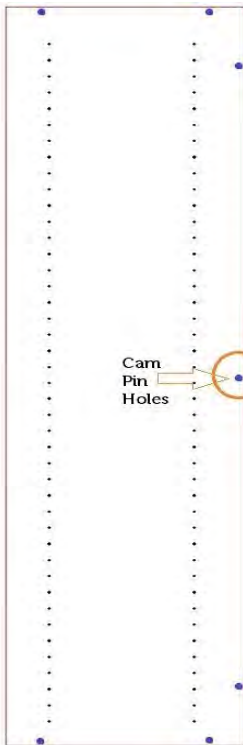


End Right

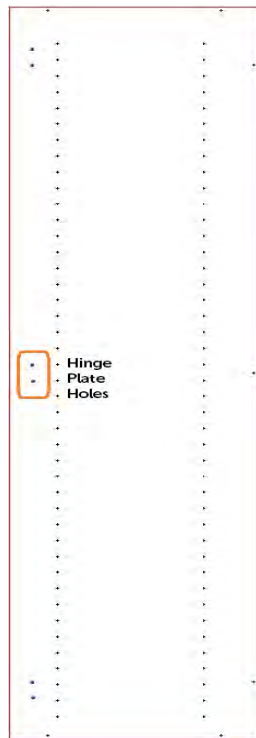


Door Panel




Back Panel

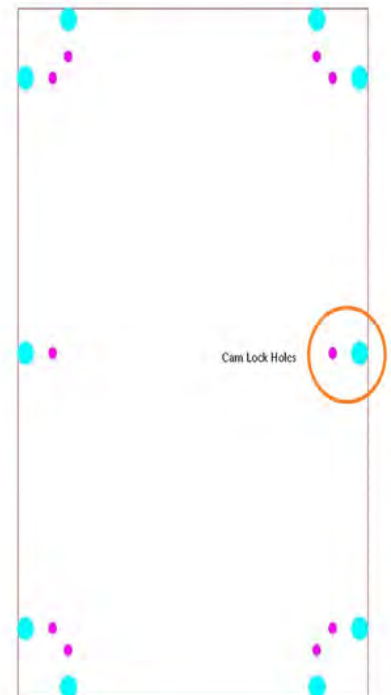


Top Panel

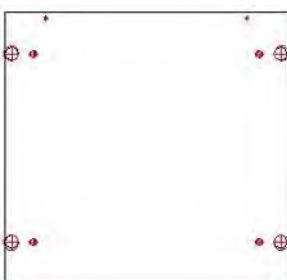

Bottom Panel

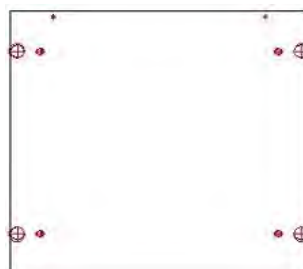

Adjustable Shelf

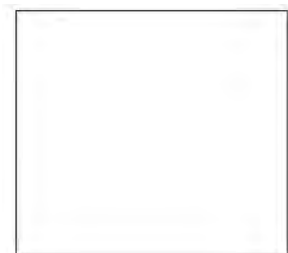

AB-6a Top Cabinet Hardware Parts

Cam Lock



Cam Pin



Small Handle



Handle Fixing Screw



Shelf Pin



Door Hinge Clip



Door Hinge





28mm Wood Screw







Step 1 – Inserting Hardware

Cam Locks – Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

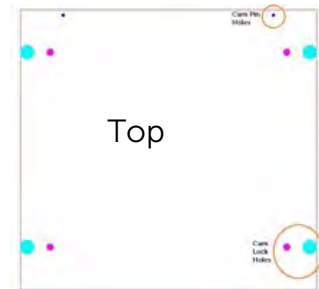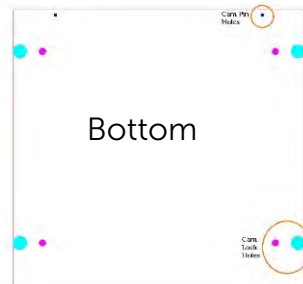

Cam Pins Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

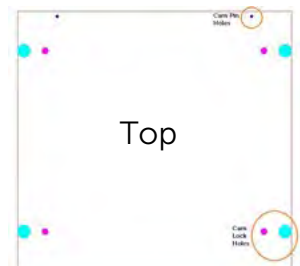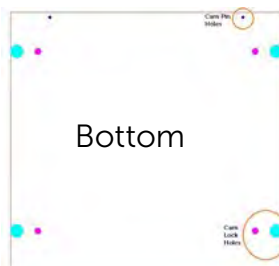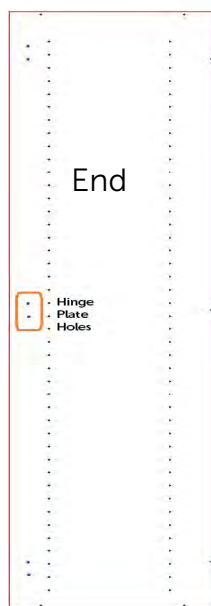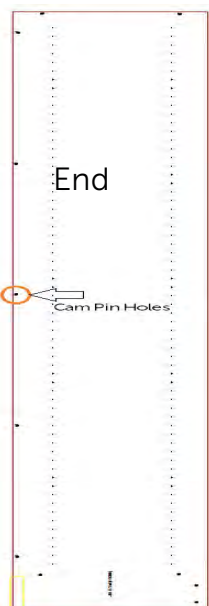

NOTE: In both the Top and Bottom Panels Insert the cam pins on the opposite side to the Cam Lock.

DoorHinge Clips –



Attach the Hinge Plates before assembling the cabinetry.

With the arrow indicator on the hinge block facing to the front edge of the panel. Line up the Hinge Plate with the pre-drilled holes in the End Panel. Fix these by tapping them in gently with a hammer, then tightening the screws.

Step 2 - Cabinet Assembly

Start the assembly by using either one of the End Panels and fixing it to the Back Panel. Ensure the cam locks on the Back Panel are not facing what will be the inside of the Bookcase when built.

Back Panel- Place the Back Panel onto the End Panel. Match up the cam locks with the cam pins. Tighten the cam locks and cam pins together by using a Phillips head hand screwdriver.

Top & Bottom Panels- With the cam locks facing away from the inside, attach the Bottom Panel to the End Panel and Back Panel. Repeat this process with the Top Panel. *Refer image 7 page 10*

Place the remaining End Panel on top of the previously assembled panels. Tighten the cam pins to the cam locks.

Tip: You may need to lightly tap the cam pins into the cam locks with a rubber mallet. Ensure you do this where the cam pins are. Failure to do so may result in damage to the End Panel.

Step 3 – Attaching both units together and to the Alpha Wall Bed

- Place the Drawer Cabinet unit next to the side of the Alpha Wallbed that it will be attached to. Ensure the front edge of the drawer is flush with the front edge of the wall bed cabinet.
- Place the upper Cabinet on-top of the drawer cabinet unit. Line up the front edge of the Bottom Panel with the front edge of the Top Panel of the lower drawer unit. Open the drawer to achieve this.
- Check that the end panel of the upper cabinet is also flush with the front edge of the wall bed end panel.

To attach the two units together you will need to use a 5mm drill bit to pre-drill the 28mm wood screw holes required.

IMPORTANT- Use caution not to go all the way through to the opposing panel of the unit that it is being attached too. panel of the unit above. Attach units together using the 28mm screws supplied.

- Remove the Pull Out Drawer / Table. Pre-drill a drill a 5mm hole up through the top panel and **no-more than 5mm** into the bottom panel of the unit above. Place one 28mm wood screw towards the front and then another towards the back of the unit.
- Using an existing shelf pin hole, pre-drill a 5mm hole through the end panel but **no-more than 5mm** into the End Panel of the wall bed. Fix the cabinet to the side of the wall bed cabinet by using the 28mm wood screws supplied.

Step 4 – Fitting the Door Hinges into the Door Panel

Door Hinges –



Place the cup part of the hinge into the cupboard door panel ensuring that the arm of the hinge is facing out of the door panel. Once in the position close the hinge flap, this will secure them into place. There are no screws required to attach these hinges.

Attaching the Door to the Cabinet - Clip the hinge arm into the hinge block previously attached to the bookcase.

Adjustable Shelf - Insert the shelf pins into the shelf pin holes at the desired height for your shelf.

Attaching the door handle



Place the handle over the pre-drilled holes in the door panel. Insert the handle screws through the pre-drilled holes in the door panel and tighten using a Phillips head screw driver.

IMPORTANT SAFETY INFORMATION

All WallBeds Australia Bookcases and Cabinets must be securely attached to the WallBed before use. Ensure that children DO NOT climb or hang on any part of the Bookcase or Cabinet.

Failure to do so may result in personal injury.

Removing Panel Stickers/Labels

To remove once installed, heat up with hair dryer & then to remove any sticky residue use wax and grease remover or similar.

Avoid using a razor blade as you may damage the cabinetry.

Image 1



Image 2



Image 3

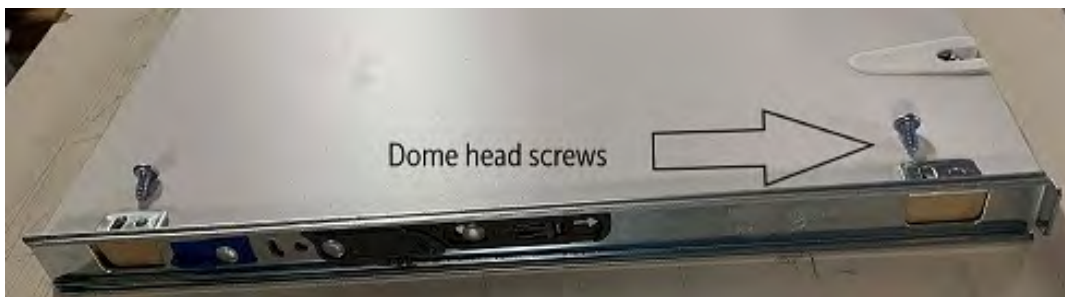


Image 4

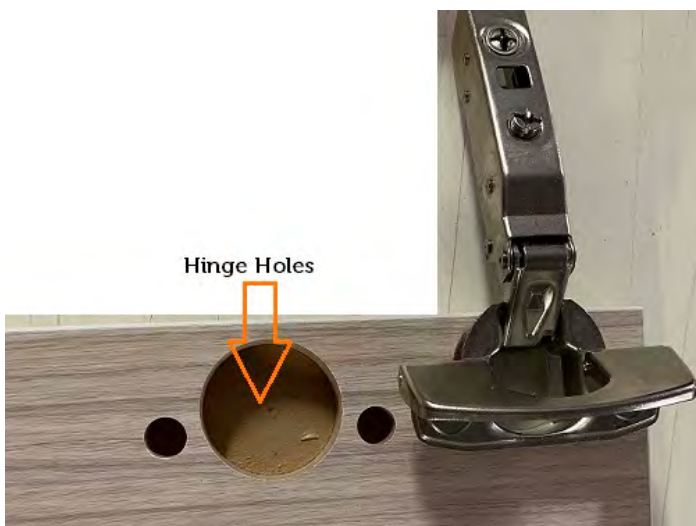


Image 5



Image 6

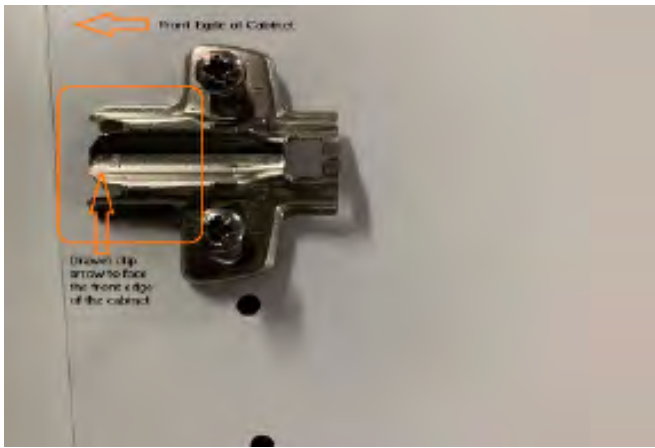


Image 7

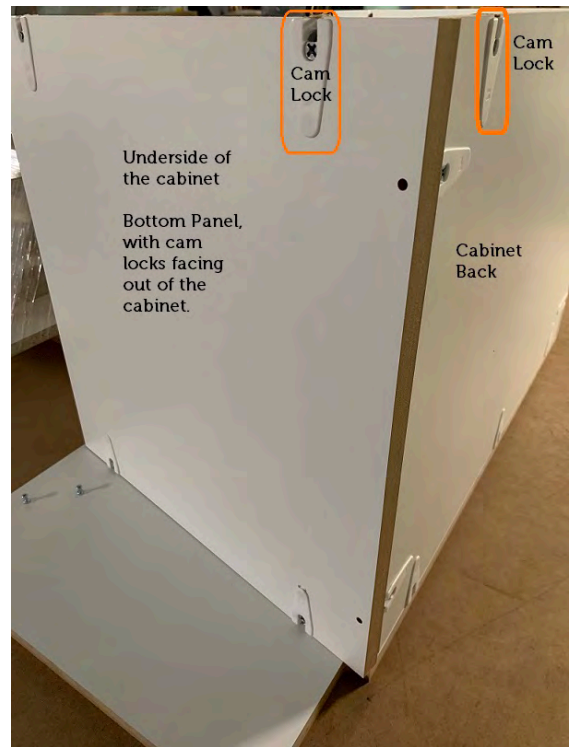


Image 8

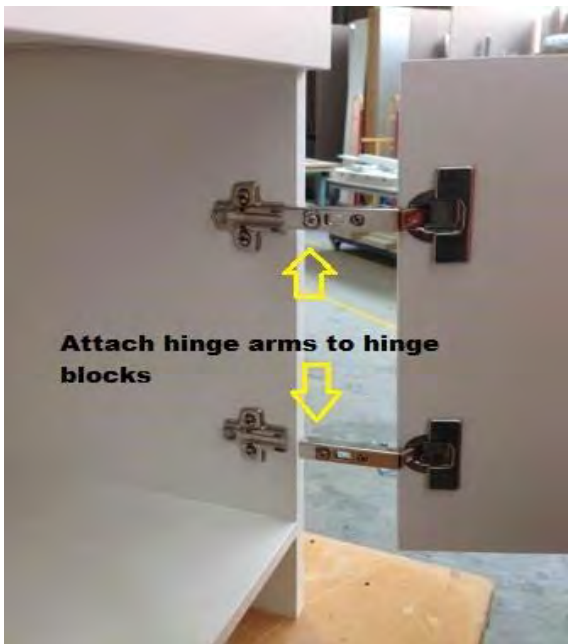


Image 9

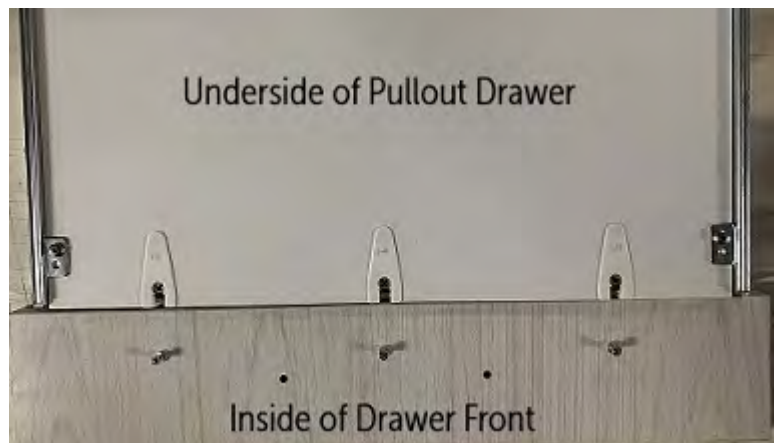


Image 10

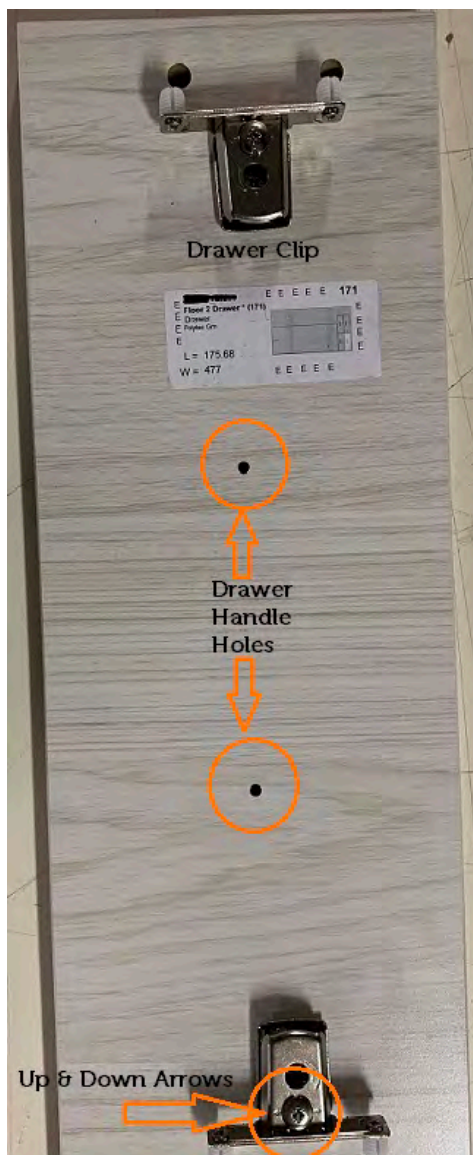


Image 11


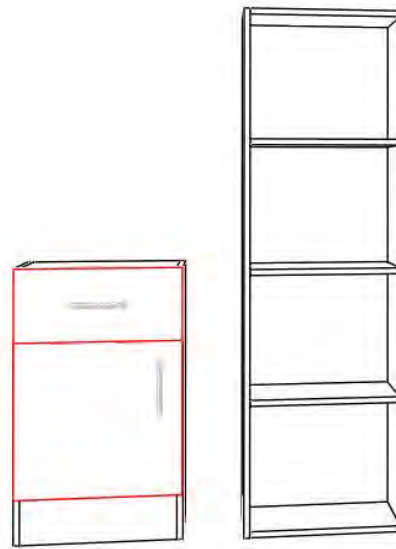


Image 12

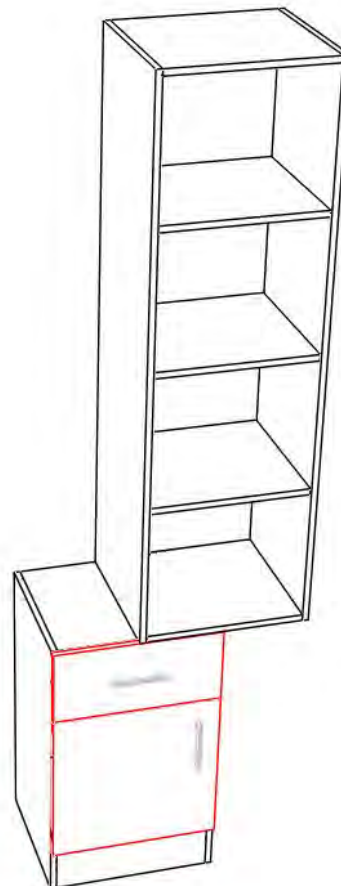

NOTE: Images 11 & 12 is a representation of how to place the Top unit onto Lower unit. These images may not represent the product purchased.