



Safety Advice Sheet PLEASE READ BEFORE YOU BEGIN:


- Please read and understand the instructions before assembly.
- Incorrect installation of this product could result in personal injury or physical damage.
- WallBeds Australia recommends that eye protection is worn when
- assembling the product.
- The wall bed **MUST** be securely fastened to the wall. Failure to do so will cause the wall bed to tip over & may cause damage to the cabinet or serious personal injury.
- While these products are DIY, it is recommended a qualified tradesperson installs the wall bed if you are not comfortable with the installation of this product.

WallBeds Australia is not responsible for any damages or injuries incurred by the incorrect installation of this product.







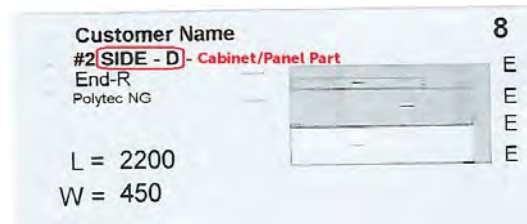





NeXt Bed Cabinetry Assembly Instructions

Panel Stickers/Labels – Do not remove any cabinet stickers from the panels until the units have been built, as these will assist with assembly. Most of the stickers are placed on the “back” or underside of the cabinet and will not be seen once assembled.



Example of part sticker on each panel





NeXt Bed Cabinet Hardware Parts List

- | | | | | | |
|---|---|--|---|---|--|
| Cam Lock
 | Cam Pin
 | Dome Head Screw
 | "L" Wall Bracket
 | 65mm Wall Fixing Screw
 | |
| 16mm Headboard Plate Screw
 | Flush Door & Headboard Hinge
 | 15mm Door Magnet, Hinge Cup Screw
 | | | |
| Headboard Pin
 | Round Door Magnet
 | 12mm Round Magnet Screw
 | Rectangle magnet, door & headboard
 | | |
| Hinge Arm
 | Hinge Cup
 | 12mm Hinge Arm Screws
 | Hinge Cap
 | Handle Screw
 | NeXt Bed Handle
 |

Tools Required

- | | | | |
|---|--|---|--|
| 
Spirit Level | 
Stud Finder | 
Phillips Head Screwdriver | 
Rubber Mallet |
|---|--|---|--|

NeXt Bed Cabinetry Assembly Labels

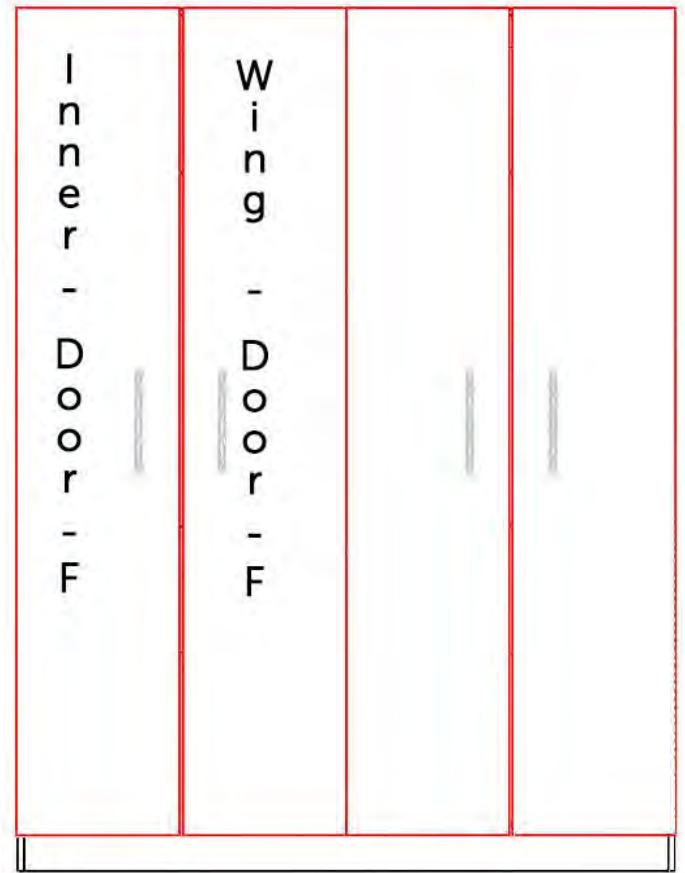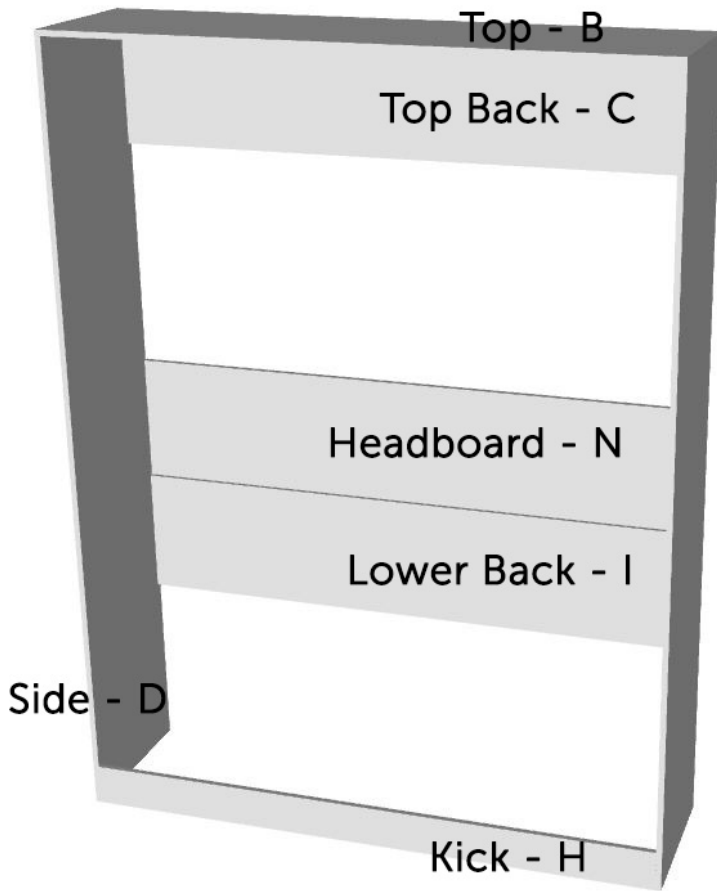

Step 1 – Inserting Drawer Cabinetry Hardware

Cam Locks – Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.



Top Panel - B



Kick - H



Top Back - C



Lower Back - I



Cam Pins Insert all Cam Pins into the following panels as described by the cabinet part located on the cabinet sticker.



Side Panel - D

Side Panel - D

Top Panel - B




Headboard Flush Hinges Place the Flush Hinge over the 5mm pre-drilled guide holes ensuring that the holes line up. If they do not then turn the hinge plate around, attach the hinge by using the Dome Head screw.

NOTE – The Headboard will not close correctly if the Flush Hinges are not correctly installed. Refer to images 2 page 8.




Headboard Magnet Block Place the Magnet Block over the 5mm pre-drilled guide holes ensuring that the pre-drill holes are in the middle of the block. This will allow for adjustment that may be required after the Headboard has been fitted. Attach using the 15mm countersunk screws.

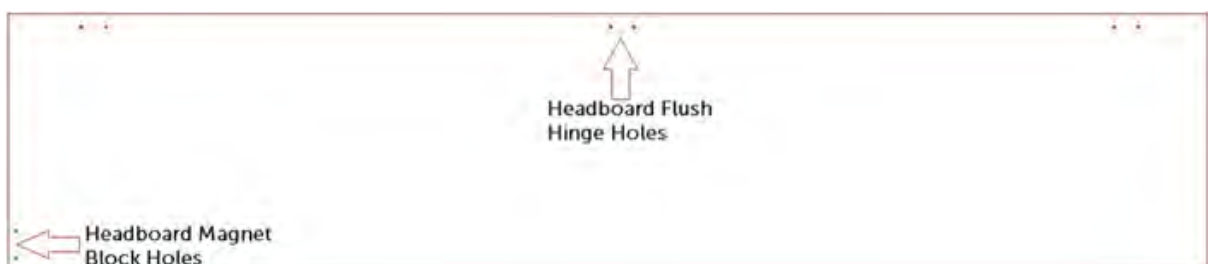

Attach the following hardware prior to assembling the cabinetry

Hinge Arm, Hinge Cups, Headboard Magnet Strike Plate


- Insert the Hinge Arms into the two cabinet Side Panels and tighten the Hinge Arm pre-fitted screws.
- Secure the Hinge Arm into position using the 8g 12mm counter sunk screws/
- Insert the four Hinge Cups into the two Inner Door panels and fix into place using the 15mm Hinge Cup screws. Ensure that the front edge of the Hinge Cup is parallel with the edge of the door panel.
- Attach the Headboard Magnet Strike plate using two countersunk 16mm screws.

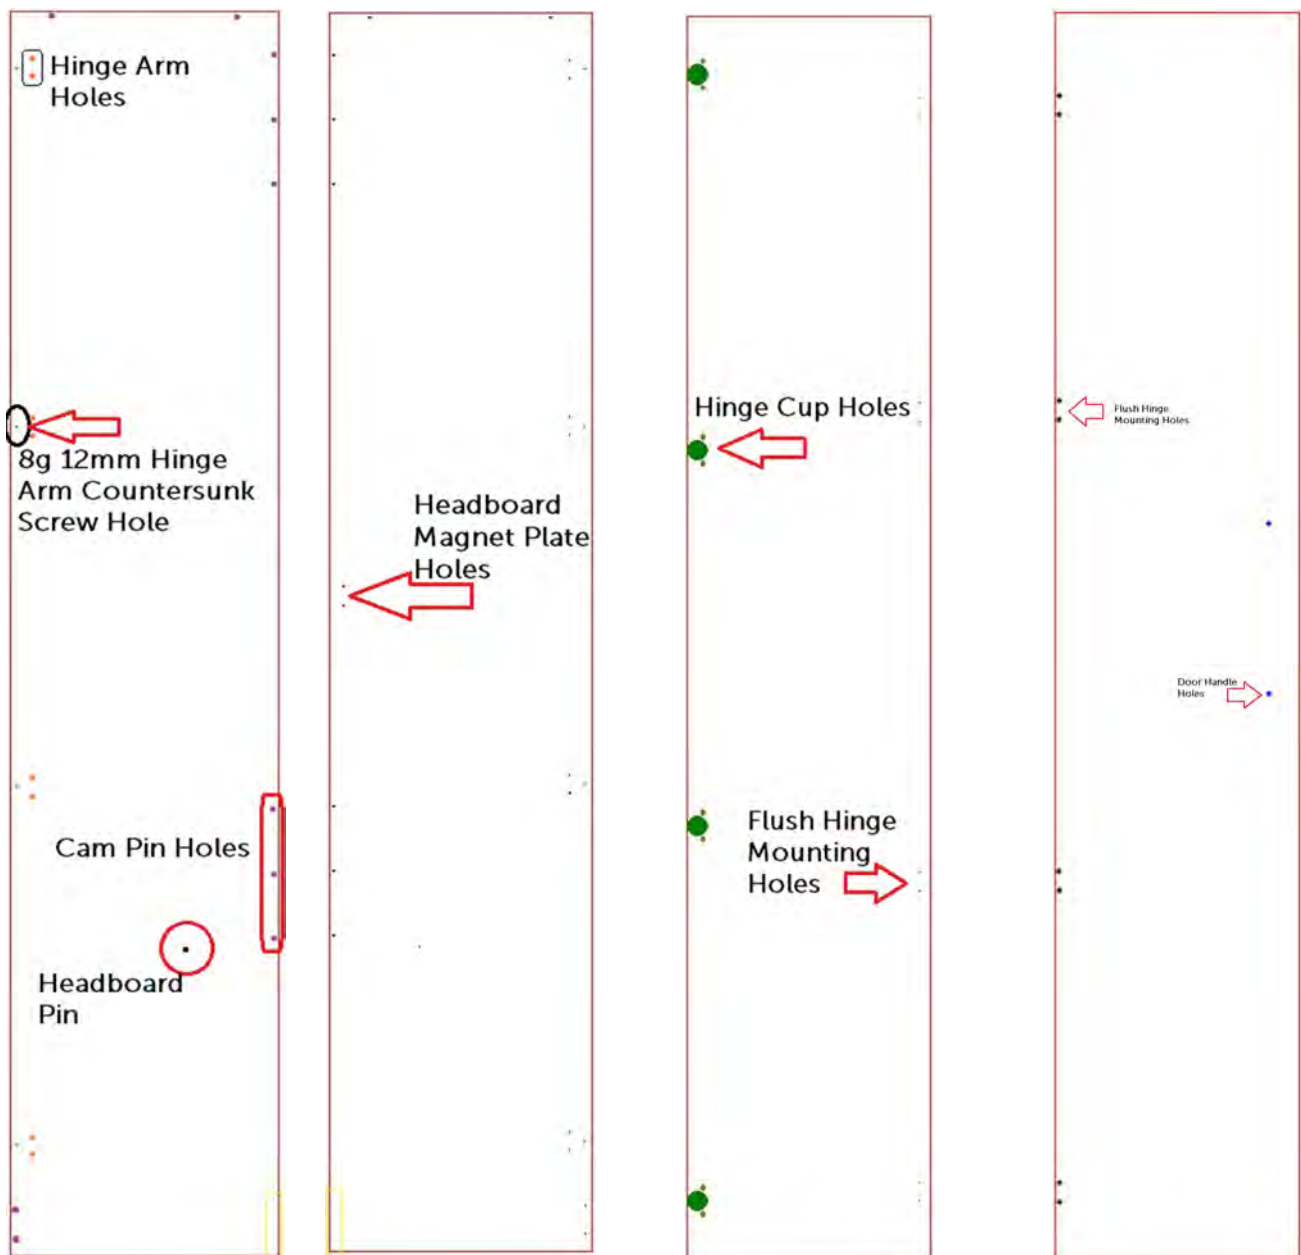

Step 2 - Door Panel Assembly

Match up the correct Inner and Wing Door Panels by the L/H or R/H description on the white cabinetry sticker.

- Place the Flush Hinge over the 5mm pre-drilled guide holes. Ensuring that the holes line up. If they do not then turn the hinge plate around, attach the hinge by using the Dome Head screw.
- Tip - To create an even gap between the two-door panels, place a small washer or 10c piece between the two panels at the top & bottom of the door panels. Repeat this for both sets of doors.

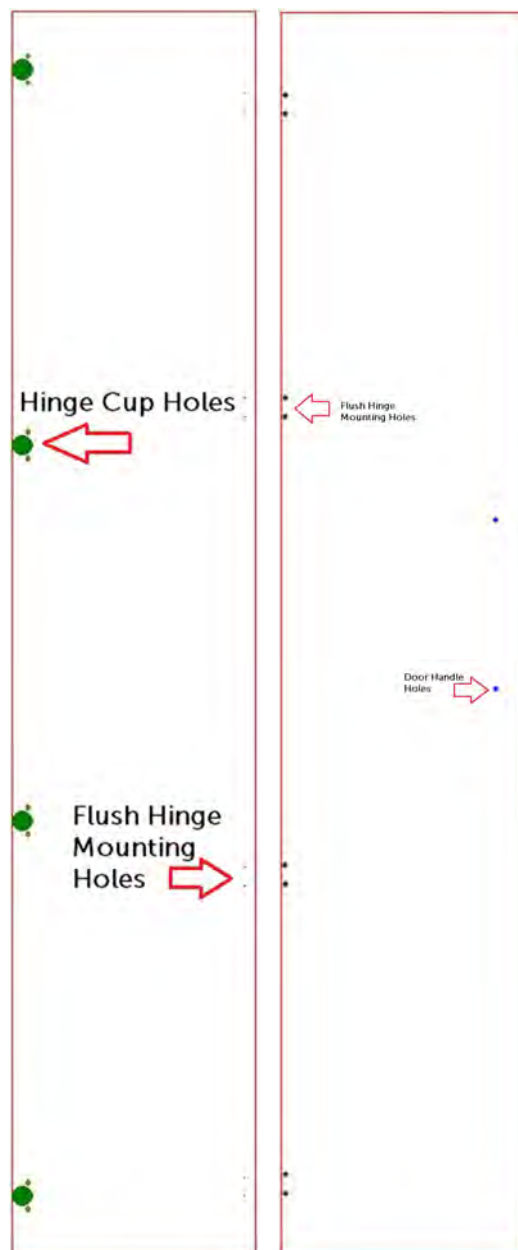

Step 3 - NeXt Bed Cabinet Assembly

WallBeds Australia recommends that a second person assists with the assembly of the cabinet and installation of the door panels.

When attaching all the cabinetry panels ensure that all cam locks are facing up or the outside of the cabinet. The Cam Locks should not be visible after the cabinet has been assembled.

It is recommended you use a hand Phillips screwdriver to tighten the cam locks to the cam pins, not a power tool.

Important - Do not attach the doors or headboard until the cabinet has been secured to the wall.

Start the cabinet assembly by using either one of the Side/ End Panels and fixing it to the Back Panel. Ensure the cam locks are not facing the inside of the cabinet.

Top Panel - B - With the cam locks facing away from the inside attach the Top Panel to the Side/ End Panel

Kick Panel - H - Attach the Kick Panel onto the Cam Pins in the Side/End Panels.

Back Top - C - Place the Back Top Panel onto the Cam Pins in the Side/End Panels and the Top Panel.

Back Lower - I - Place the Back Lower Panel onto the Cam Pins in the Side/End Panels.

Tip - To get the Back Panels into position within the cabinet, lower one side past the cam pins until it is resting on the floor. Then slowly lower the opposite side until it is just past the cam pins.

Step 4 -Attaching the cabinet to your wall

Important: The fixing screws supplied are only suitable for timber wall studs. If your wall is not a wood stud wall, then you will need to use metal stud screws, toggle bolts or concrete expansion bolts as necessary.

- Locate two wall studs or other wall frame members at the level of the Top panel. *Refer to image 1 page 9*
- Using a spirit level to ensure the cabinet is level. If the cabinet is not level, you may need to use "packers" to achieve the cabinet being level.
- Measure diagonally to be sure the cabinet is square. The doors will not operate correctly if the cabinet is not square.
- Once the cabinet is square and level, use one 65mm wood screws in each of the two "L" brackets to attach to studs.
- Re-check the wall bed cabinet is square and level and then secure "L"-Brackets to the Top Panel (B) of the wall bed by using the Dome Head wood screws.

Step 5 - Attaching the Doors to the Cabinet

Ensure that the Hinge Arms are open.

- Place the Hinge Cups over the Hinge Arm to be clipped together. There will be an audible “click” if correctly clipped together. These may need to be lightly tapped into position with a hammer.

Door Magnet Locks - Using the 15mm screws attach the 2 Magnetic Door Locks in the middle of the Top Panel - B where the two doors meet when closed. Attach the magnet plates on the inside of the wing door opposite the magnet.

Tip – Place a small amount of double-sided tape onto the back of the magnet block & strike plate. Close the door and place the magnet block into position, hold the strike plate onto the door when opening. Then attach using the 15mm screws supplied.

Round Magnet - Attach to the Inner door panel using the 4g 12mm screw supplied.

Tip – Place a small amount of double-sided tape onto the back of the round magnet & position it onto the Wing Door strike plate. Close the door onto the Round magnet and press firmly onto the Round magnet. Carefully open the door and the Round magnet should remain stuck to the Inner door.

Close the door completely to ensure the Round magnet will not strike on the Top Panel of the cabinet if it does then reposition the Round magnet. Once in the correct position, attach using the 4g 12mm screws supplied. *Refer to images 5 & 6 page 9*

Step 6 - Attaching the Headboard

To assist with creating an even gap of at least 5mm between the top of the Lower Back Panel & the Headboard, place washers in three locations along the top edge of the Lower Back Panel. The gap will allow for the lowering and raising of the headboard without the magnet scraping on the Side/End panel. *Refer to image 4 page 9*

Position the Headboard onto the washers and once in position, fix into place using the Dome Head Screws.

The magnet DOES NOT need to strike directly onto the magnet plate when closed as the strength of the magnet does not require it to make contact with the plate. If this occurs loosen off the magnet screws and move it back from the edge of the headboard.

Once the headboard has been attached, insert the Headboard Pin into the location on the Side/End Panel - D

Cabinetry Assembly Images

Image 1

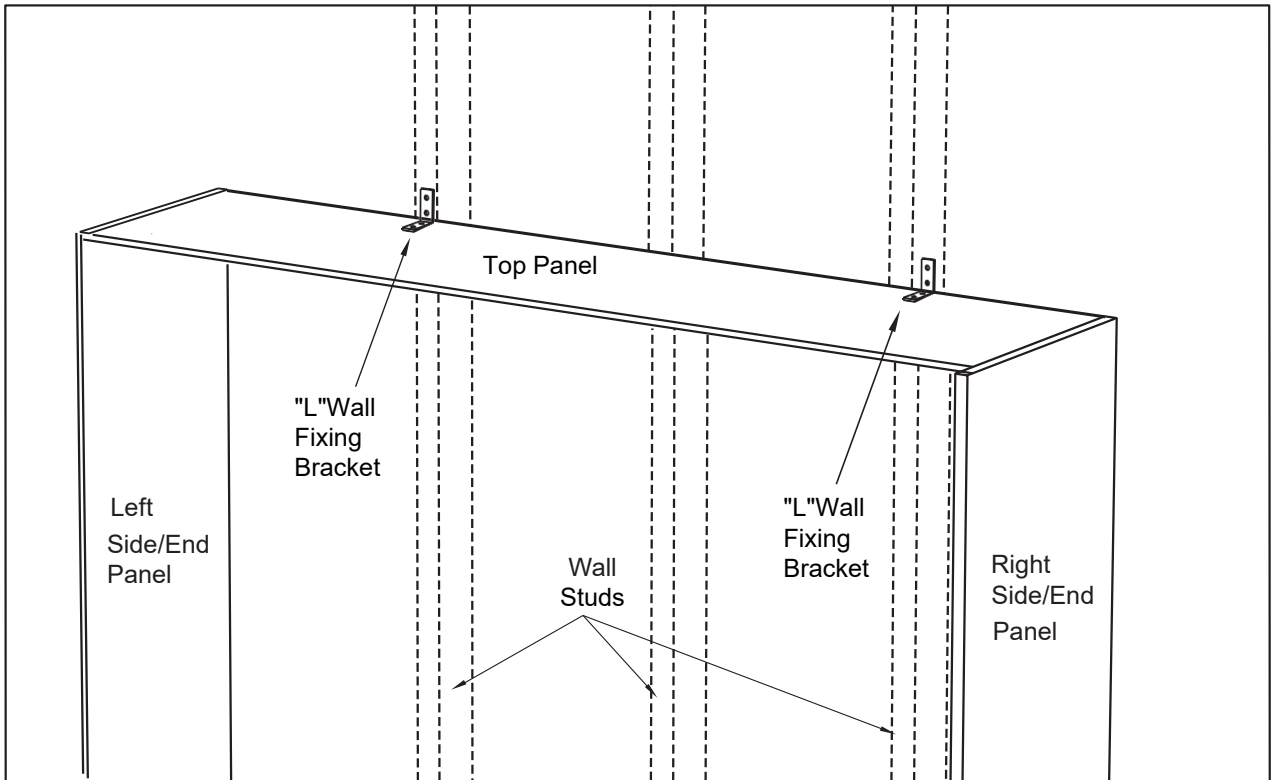


Image 2



Image 3

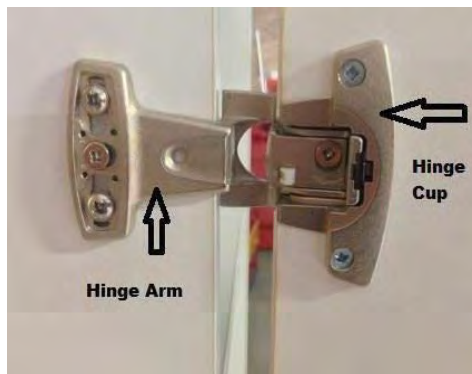


Image 4

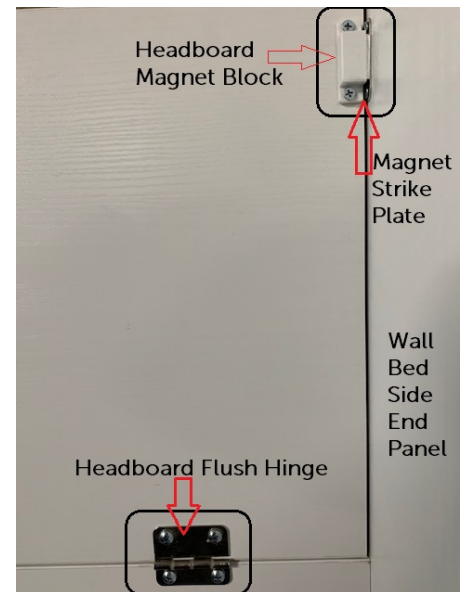


Image 5



Image 6

