WALLBEDS Australia

Reclaim Your Space

Important Safety Advice Sheet

PLEASE READ BEFORE YOU BEGIN:

- Please read and understand the instructions prior to assembly. Incorrect installation of this product could possibly result in personal injury or physical damage.
- WallBeds Australia recommends two people to safely assemble and install the wall bed - It is not recommended you try to install this bed on your own.
- The wall bed MUST be securely fastened to the wall prior to use. Failure to do so will cause the bed to tip over & may cause damage to the cabinet or serious personal injury.
- All additional cabinetry must be securely fastened to the Wall Bed cabinet.
- Whilst these products are DIY it is recommended the wall bed be installed by a qualified tradespersons if you are not comfortable with the installation of this product.

WallBeds Australia is not responsible for any damages or injuries incurred by incorrect installation of this product.

©2026 WallBeds Australia V7

WALLBEDS Australia

Reclaim Your Space

AB-4c Cabinet Assembly Instructions

Note: Each cabinet will have a different cabinet number shown in the top Left Hand side of the part sticker. Prior to assembly, separate and group all matching cabinet numbers.

Example of the Panel Sticker located on each panel.

Cabinet number shown on this label is an example only.

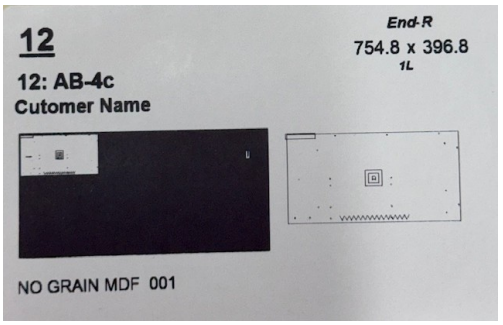

Panel Sticker / Labels - Do not remove any cabinet stickers from the panels until the units have been built, as these will assist with assembly. Most of the stickers are placed on the "back" or underside of the cabinet and will not be seen once assembled.

Drawer Cabinet Panels

2 x Ends

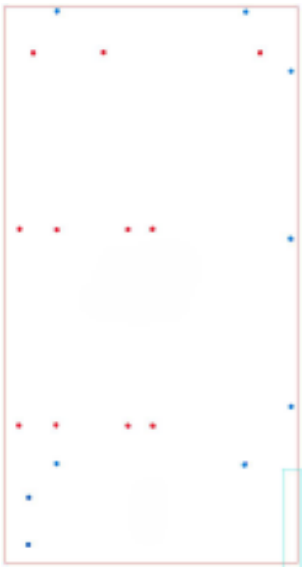

Back

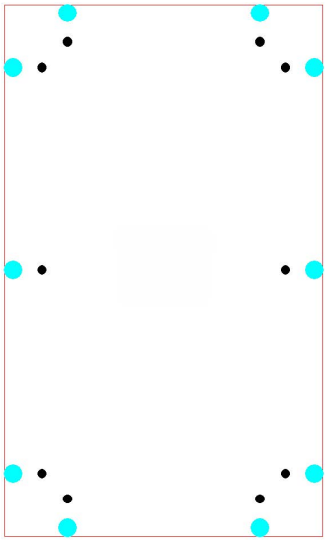

Top and Bottom

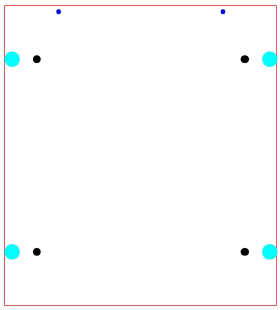

Kickboard

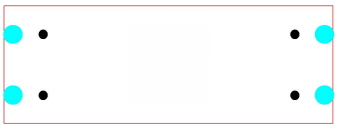

Drawer Bottom

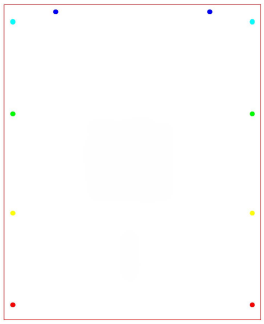

Drawer Front

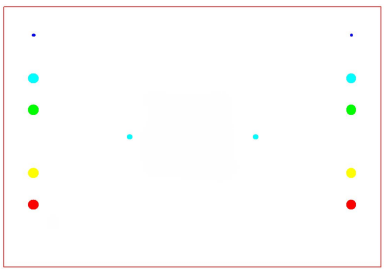

Pull Out Drawer / Table

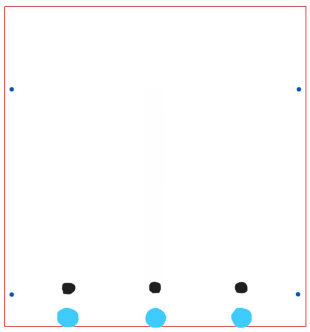

Pull Out Table Drawer Front

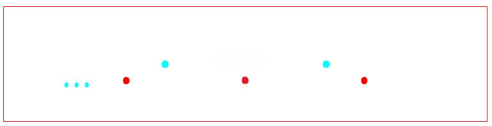

Drawer Back

©2026 WallBeds Australia V7

AB-4c Drawer Hardware Parts

Drawer Runners

Drawer Sides

Drawer Back Clips

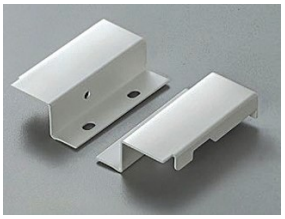

Drawer Front Connectors

Pull Out Drawer / Table Runners

Cam Lock

Cam Pin

Small Handle

Euro Screw

28mm Wood Screw

Dome Head Screw

Handle Screw

Step 1 – Inserting Drawer Cabinetry Hardware

Cam Locks – Insert all Cam Locks into the following panels

Back Panel

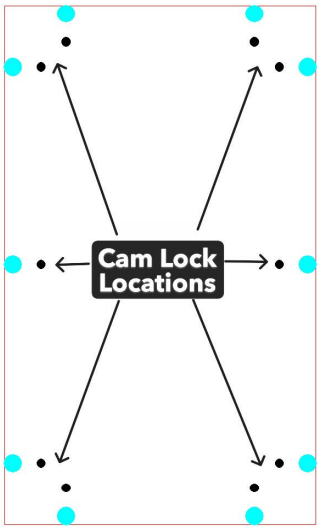

Bottom and Top Panels

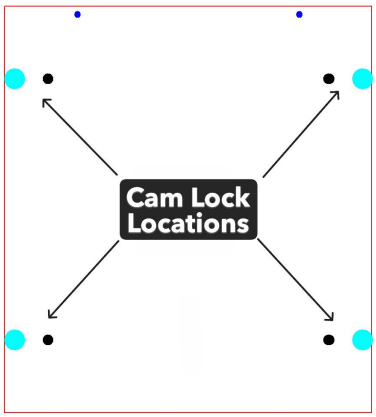

Pull Out Drawer / Table

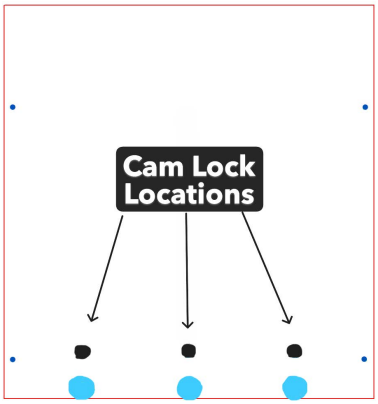

Kickboard

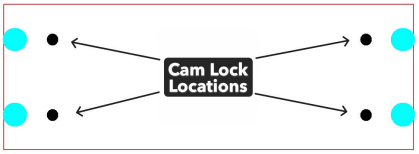

©2026 WallBeds Australia V7

Step 2 - AB-4c Drawer Unit Assembly

Cam Pins - Insert all Cam Pins into the following panels.

2 x End Panels

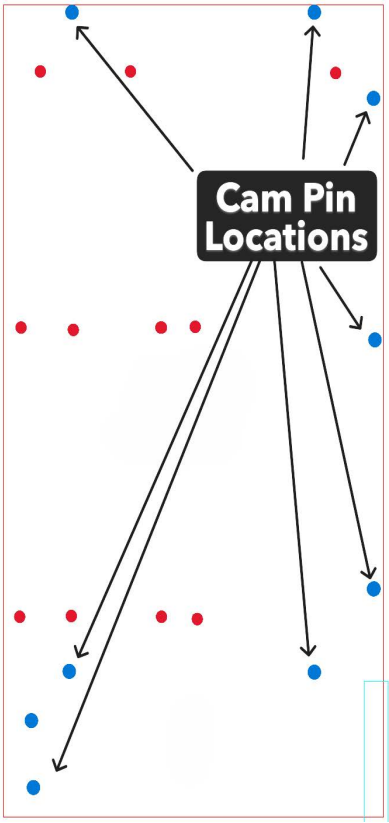

Bottom Panel

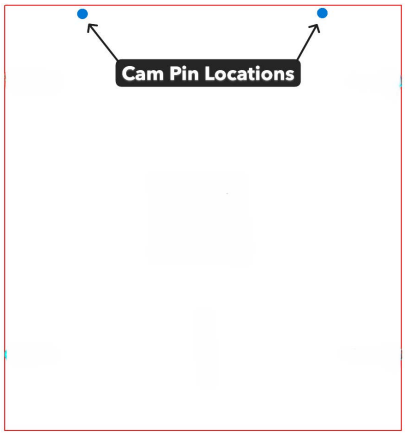

NOTE: In the Bottom Panel insert the cam pins on the opposite side to the Cam Lock

Top Panel

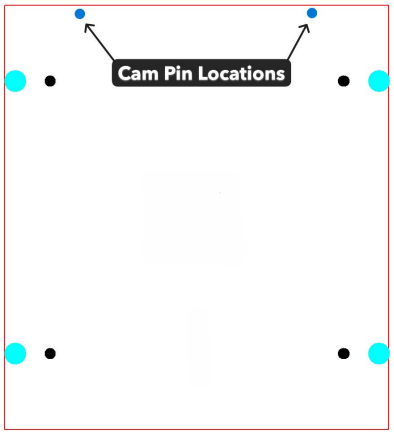

NOTE: In the Top Panel insert the cam pins on the same side as the Cam Lock

Pull Out Drawer /Table Drawer Front

Step 3 - Drawer Unit Assembly

Start the cabinet assembly with either End Panel. Keep the cabinet on its side to make attaching the drawer hardware and aligning parts easier.

Back Panel – Position the cabinet's back panel onto the end panel. Ensure all cam locks face away from the interior of the cabinet. Align each cam lock with its corresponding cam pin, then tighten the cam locks using a Phillips-head screwdriver.

Bottom Panel – Attach the bottom panel to both the end and back panels, ensuring the cam locks face away from the cabinet's interior.

Top Panel – Attach the top panel to the end panel and the back panel, ensuring the cam locks are facing into the cabinet's interior.

Kick/Rail Panel – Attach the kick panel to the end panel with the cam locks facing the back of the cabinet.

Note: Do not attach the opposite end panel at this stage. Attach the drawer runners and pull-out table runners to it first, before fixing the panel in place

©2026 WallBeds Australia V7

Step 4 - Drawer Runners

Attach the Drawer Runners and Pull Out Table Slide Runners with Euro Screws.

Pull Out Drawer / Table Slides – Runners

Detach the drawer slide from the main runner by pressing the orange button on the back of the slide. Align the slide with the pre-drilled holes closest to the top panel, ensuring the front and back fixing points are properly aligned. Secure the slide using Euro screws. To access the middle hole, push the slide back, then click the yellow lever to fully open the runner.

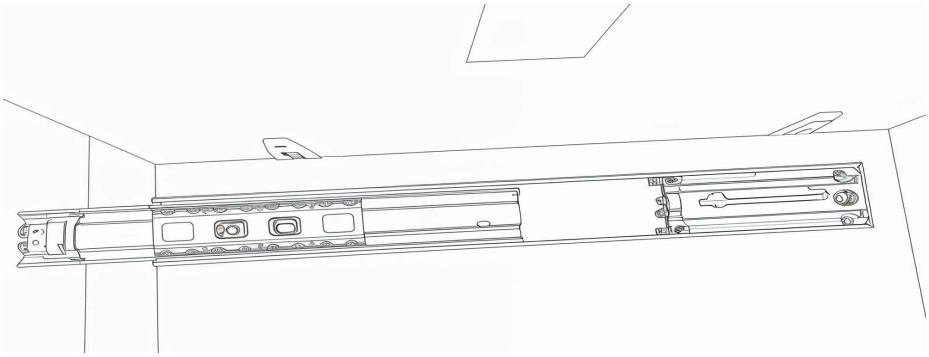

Drawer Runners –

Use the top row of holes in the runner and align the first hole with the front edge of the end panel. The other three holes should line up with the remaining pre-drilled holes.

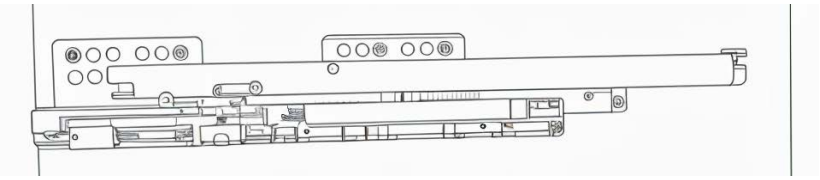

Preparing the Cabinet for Assembly

Repeat the process of attaching the Drawer Runners and Pull Out Table Runners to the remaining End Panel. After attaching the runners, place the panel over the cabinet's cam locks. Align each cam pin with its cam lock, then tighten with a Phillips-head screwdriver.

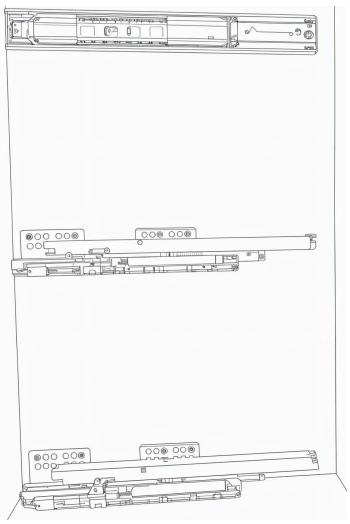

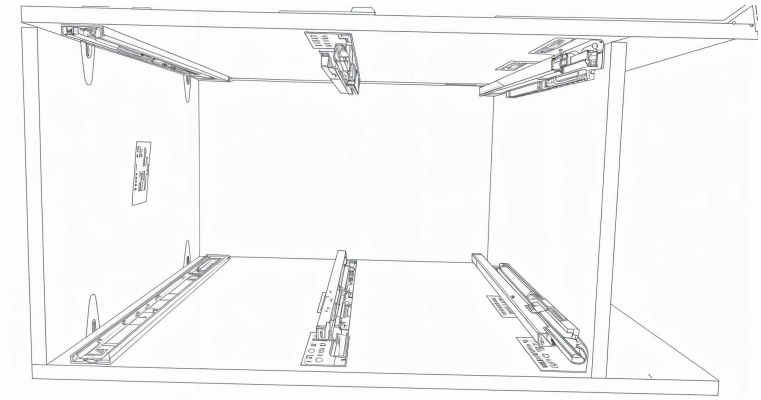

©2026 WallBeds Australia V7

Step 5 - Assembling the Drawers

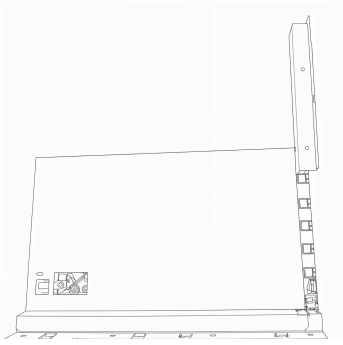

Attaching the Drawer Sides Drawer Back Connectors –

Attach the drawer back connectors to the metal sides by sliding each between the grey plastic hooks at the drawer's rear. Each clip is marked L or R for easy identification.

Attaching the Drawer Bottom and Back Panels

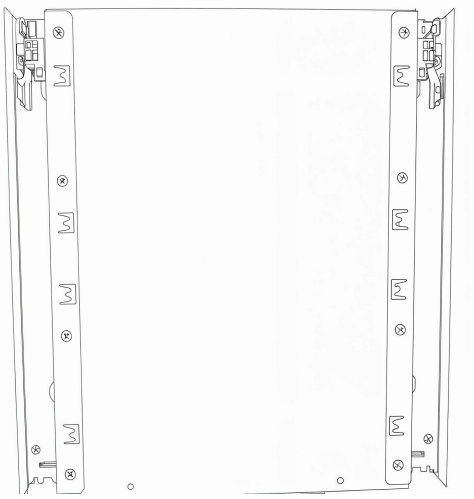

Stand the drawer side panel upright. Insert the Drawer Bottom so the two holes along its short side face the Drawer Back Connectors. This aligns the metal drawer holes with the pre-drilled holes for Euro Screws to attach the sides to the Drawer Bottom.

Insert the Drawer Back Panel and attach to the Connectors using the Euro Screws.

NOTE- *The two holes on the short side of the Drawer Bottom are not used to connect the Drawer Back Panel. These are only used to identify the back edge of the Drawer Bottom Panel.*

Drawer Front Connectors -

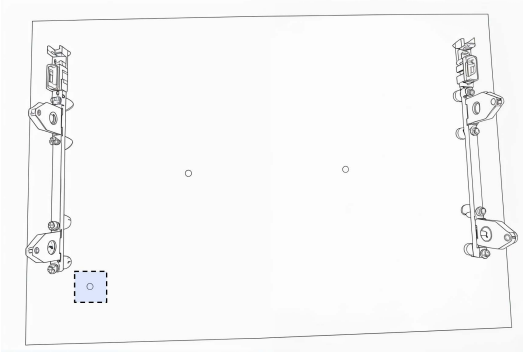

Insert these into the pre-drilled holes in the drawer front, ensuring 'UP' faces the top edge. Tap them in gently with a hammer, then tighten the screws to secure.

Note: The small offset indicator holes at the bottom left-hand side of each drawer front identify the specific drawer location within the cabinet, with drawer one of the cabinet being closest to ground level.

Pull Out Drawer Front and Table Runners –

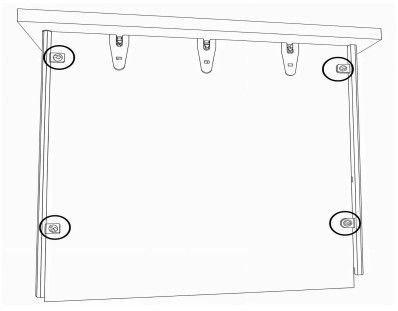

Attach the drawer front to the pull-out table. Then position the pullout drawer slides on each side over the pre-drilled guide holes, then secure the runners with dome head screws.

©2026 WallBeds Australia V7

Step 6 - Installing the Drawers and Drawer Fronts

Installing the Drawers

Pull the drawer slides out from each side of the cabinet. Position the drawer over the slides and push it back into the cabinet until you hear a click, indicating the locking mechanism is engaged.

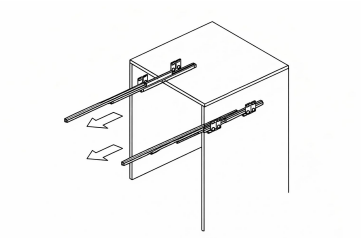

Attaching the Drawer Fronts

Before attaching the drawer front, check the number of indicator holes: one hole is for the bottom drawer, two for the second drawer up, and so on. Attach each drawer front to its correct drawer, with more holes indicating a higher position in the cabinet

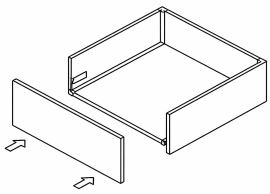

Removing the Drawer Fronts

To remove the drawer front, insert a Phillips-head screwdriver into the star-shaped cutout on the side of the metal drawer where the front is clipped in. Turn the screwdriver to release the small silver locking clip. The drawer front will then pop out

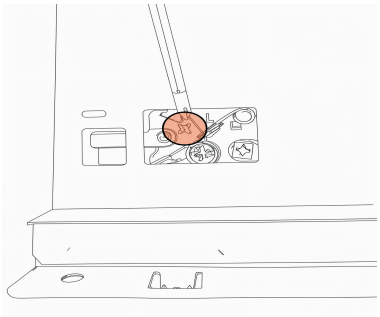

Adjusting the Drawer Fronts and Removal of the Drawer

Front panel height adjustment

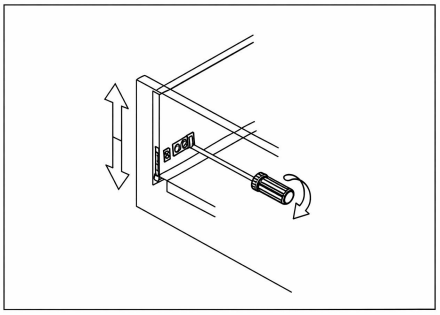

Front panel side adjustment

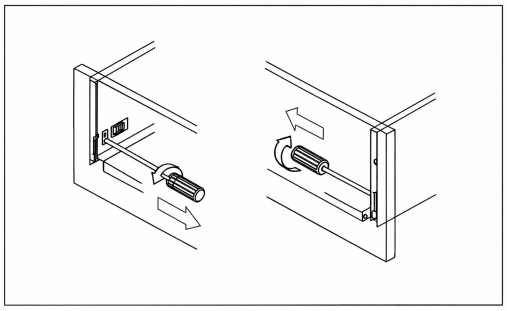

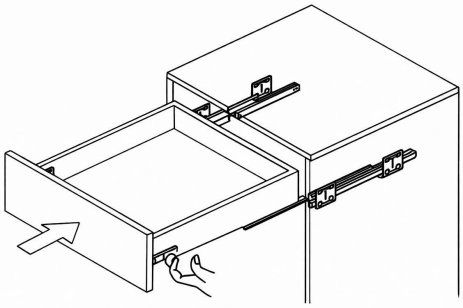

Release the metal trigger to detach the drawer

©2026 WallBeds Australia V7

AB-4c Upper Cabinet Assembly Instructions

Upper Cabinetry Panels

End Panel

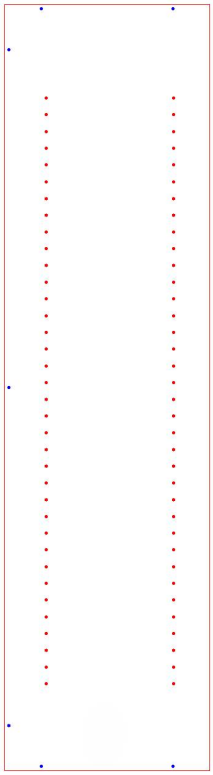

Hinged End Panel

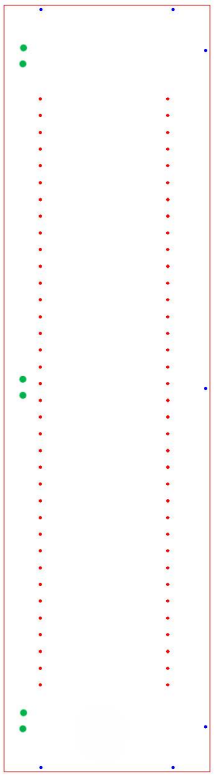

Door Panel

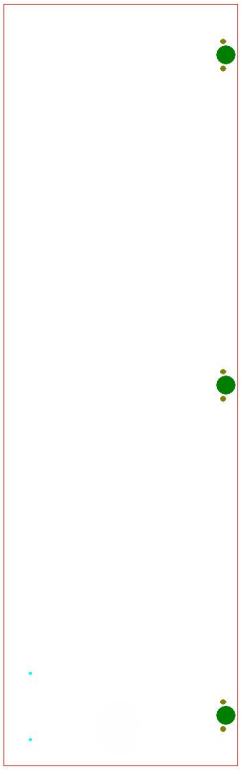

Back Panel

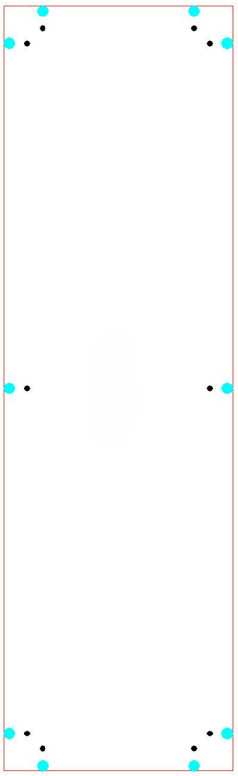

Top and Bottom Panel

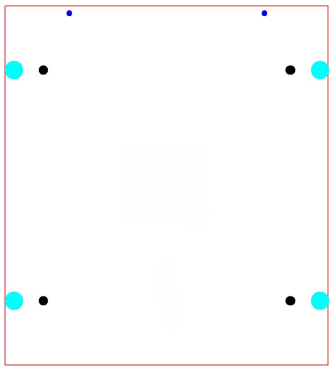

Shelf

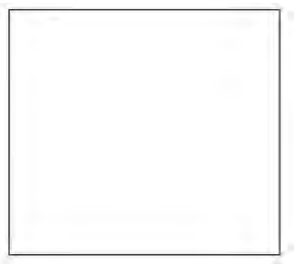

©2026 WallBeds Australia V7

AB-4c Cabinet Hardware Parts

Cam Lock

Cam Pin

Small Handle

Handle Fixing Screw

Shelf Pin

Door Hinge Clip

Door Hinge

28mm Wood Screw

Step 1 – Inserting Cabinetry Hardware

Cam Locks – Repeat the process used for the Drawer Cabinet of inserting the Cam Locks into the following panels. Back Panel, Top and Bottom Panels.

Cam Pins Insert all Cam Locks into the following panels.

End Panel

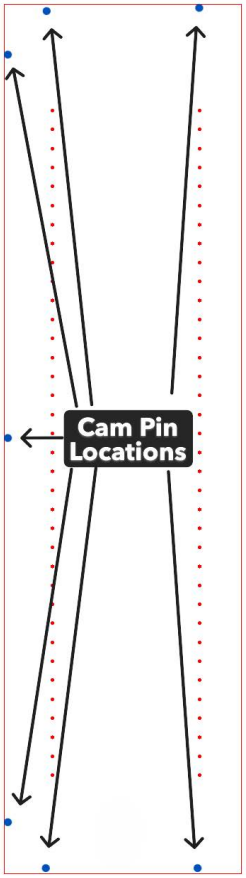

Hinge Plate End Panel

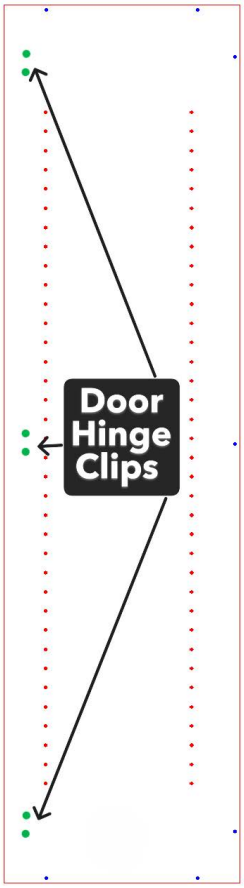

Door Panel

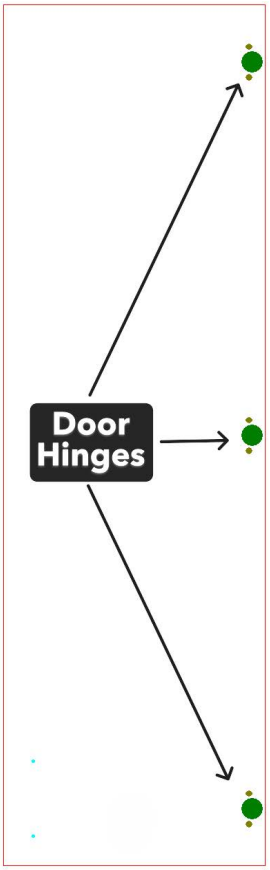

Top and Bottom Panels

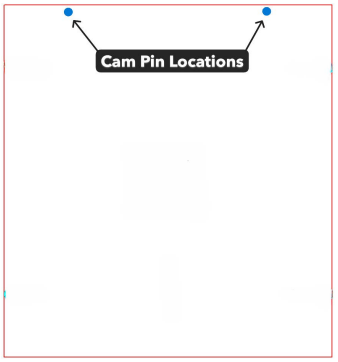

NOTE: In the Bottom Panel Insert the cam pins on the opposite side to the Cam Lock

©2026 WallBeds Australia V7

Door Hinge Plates–

Attach the Hinge Plates before assembling the cabinetry.

With the open end facing the panel's front edge, align the hinge plate with the pre-drilled holes in the end panel, then tighten the pre-attached screws.

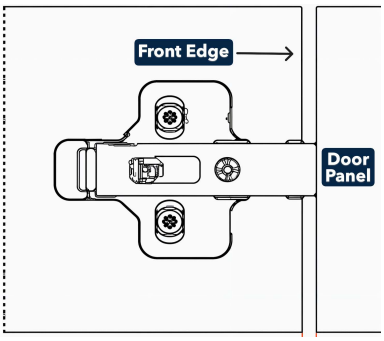

Step 2 – Cabinet Assembly

Start the cabinetry assembly by using either one of the End Panels

Back Panel - Ensure the cam locks face away from the inside. Place the cabinet back panel onto the end panel. Match up the cam locks with the cam pins. Tighten the cam locks and cam pins together with a Phillips-head hand screwdriver.

Bottom & Top Panels - With the cam locks facing away from the inside of the cabinet, attach the bottom & top panels to the back panel.

Place the remaining end panel over the assembled panels, ensuring the cam pins are lined up with the cam locks. Tighten the cam pins into the cam locks.
Note: You may need to lightly tap the cam pins into the cam locks with a rubber mallet. Ensure you do this at the locations where the cam pins are. Failure to do so may result in damage to the End Panel.

Step 3 – Placing both Units to the Alpha Wall Bed

Place the Lower Drawer unit next to the side of the Alpha Wallbed that it will be attached to. Ensure the front edge of the drawers is flush with the front edge of the wall bed cabinet.
Before attaching the door panel, place the upper cabinet on top of the Drawer Unit. Align the front edges of the upper cabinet's bottom panel and the lower drawer cabinet's bottom panel, ensuring both edges are flush. *See images 1 & 2 on page 10 for reference.*
NOTE: This will leave the Front Edge of the End Panel of this cabinet approximately 18mm back from the Front Edge of the wall bed End Panel. This will allow for the Door Panel to be flush with the wall bed End Panel.

Step 4 – Connecting Drawer and Upper Cabinets

> **Caution:** Do not over tighten the wood screws in the side of the wall bed end panel or the bottom of the top cabinet, as this may cause them to protrude through the opposite side of the panel.

Attaching the Drawer Unit to the Upper Cabinet- Remove the top drawer. Pre-drill a 5mm hole up through the underside of the top panel of the drawer unit. Secure the two units together using the supplied 28mm screws.

©2026 WallBeds Australia V7

Door Hinges –

Place the cup part of the hinge into the cupboard door panel, making sure the hinge arm faces out from the door. Once the hinge is positioned, turn the two screws in the flat plate to the right to secure it.

Attaching the door handle

Place the handle over the pre-drilled holes in the door panel. Insert the handle screws and tighten them using a Phillips head screwdriver.

Attaching the Door to the Cabinet - Clip the hinge arm into the hinge block previously attached to the bookcase.

Attaching the Cabinet to Your Wall Bed
Ensure the cabinet door panel is flush with the front edge of the wall bed end panel. Using the existing shelf pin holes (two near the top and two near the bottom), secure the bookshelf to the bed cabinet with the supplied 28mm wood screws.
Cover the screw heads using the stick-on Fast-caps.

Caution: Do not over-tighten the wood screws into the side of the wall bed End Panel, as they may protrude through the opposite side of the panel.

Adjustable Shelf - Insert the shelf pins into the shelf pin holes at the desired height for your shelf. Place your shelf on them. If you find it's too high or too low for the books you want to store, it's an easy matter to adjust the shelf by moving the supports to the holes at the required height.

Removing Panel Stickers/Labels

To remove once installed, heat up with hair dryer & then to remove any sticky residue use wax and grease remover or similar.

Avoid using a razor blade as you may damage the cabinetry.

©2026 WallBeds Australia V7

Image 1

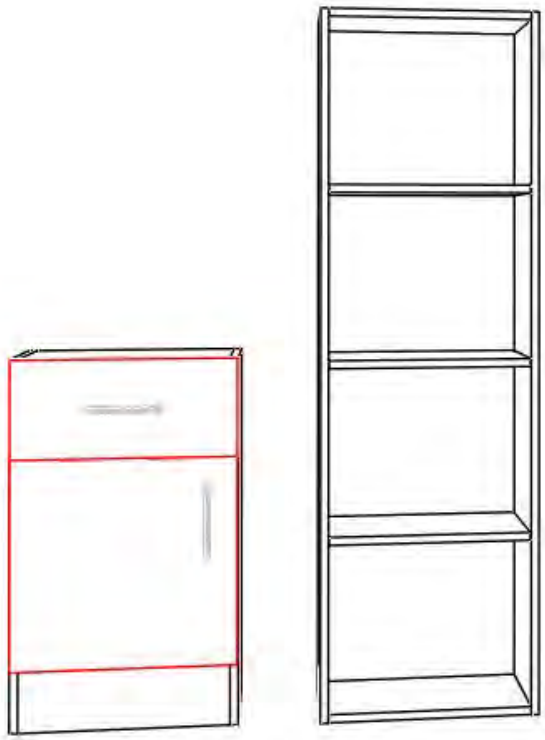

Image 2

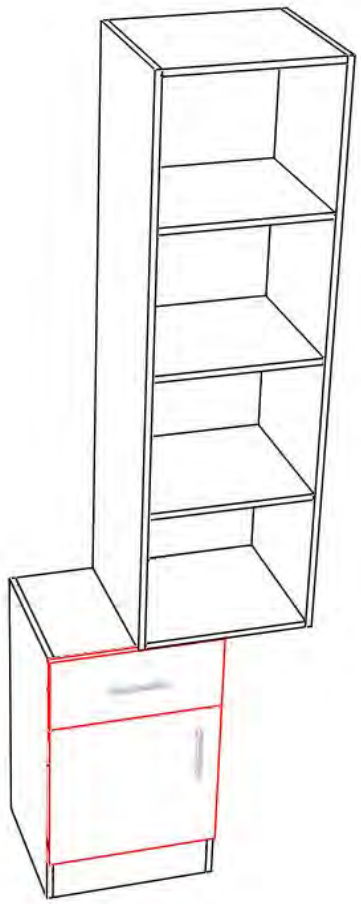

NOTE: Images 1 and 2 show how to position the top unit on the lower unit. These are for reference only and may not match your exact product.

IMPORTANT SAFETY INFORMATION

All WallBeds Australia Bookcases and Cabinets must be securely attached to the WallBed before use. Ensure that children DO NOT climb or hang on any part of the Bookcase or Cabinet.
Failure to do so may result in personal injury.

WALLBEDS Australia
Reclaim Your Space

©2026 WallBeds Australia V7